

CR, CN 32-90, model B

Double shaft seal/tandem

Service instructions



Original service instructions.

CONTENTS

	Page
1. Symbols used in this document	2
2. General information	2
3. Torques	3
4. Lubricants	3
5. Service tools	3
6. Instructions for dismantling and assembly	4
7. Exploded view	6



Warning

Prior to service work, read these service instructions carefully. Installation and service work must comply with local regulations and accepted codes of good practice.

Observe the safety instructions in the installation and operating instructions for the product.

1. Symbols used in this document



Warning

If these safety instructions are not observed, it may result in personal injury.



Warning

If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.

Caution

If these safety instructions are not observed, it may result in malfunction or damage to the equipment.

Note

Notes or instructions that make the job easier and ensure safe operation.

2. General information

Position numbers of parts (digits) refer to the drawing in section 7. *Exploded view*. Position numbers of tools (letters) refer to section 5. *Service tools*. For parts without position numbers, see the parts list of the standard CR pump in WinCAPS or WebCAPS.



Warning

If there is a risk of getting into contact with the pumped liquid, use personal protective equipment.

Observe local regulations.

Before dismantling



Warning

Before starting work on the product, switch off the power supply. Make sure that the power supply cannot be accidentally switched on.



Warning

Check that other pumps or sources do not force flow through the pump even if the pump is stopped. This will cause the motor to act like a generator, resulting in voltage on the pump.

- Close the isolating valves, if fitted, and make sure that they cannot be accidentally opened.
- Before starting work on the product, let the product and pumped liquid cool off.

Before assembly

- Clean and check all parts.
- Replace defective parts with new parts.
- Always replace gaskets and O-rings.

During assembly

- Tighten screws and nuts according to section 3. *Torques*.
- Lubricate rings and screws according to section 4. *Lubricants*.

After assembly

If the analog or digital inputs, relay output or CIM module has been removed from the pump, check the communication with external units after service.


3. Torques

Pos.	Description	Torque
9	Coupling screws	85
7a	Coupling guard screws	6
18, 18b	Air vent screws	35
23, 23a, 23b	Drain plugs	
28	Motor stool screws	62
36	Pump head nuts	100
58a, 58c	Seal carrier screws	62
105a, 105b	Shaft seal	35
113	Shaft seal set screws	6

4. Lubricants

Pos.	Designation	Product No
9		
28, 28a	THREAD-EZE	00SV9997
58a, 58c		
51	Soapy water	-
105a, 105b		
37a, 37b		
109	Rocol Sapphire Aqua-Sil	00RM2924
110		

5. Service tools

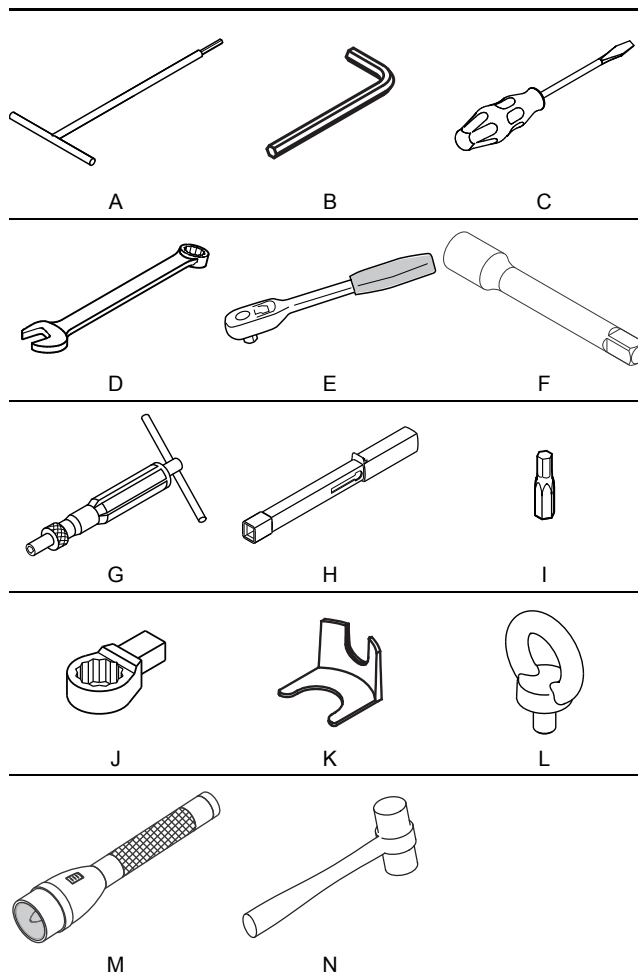

Pos.	Designation	For pos.	Tool size	Product No
A	Tee screwdriver	113	3	00SV0153
B	Hexagon key	9, 28, 58a	8	-
C	Slot screwdriver	7a	1.4	-
D	Ring/open-end spanner	18b, 23a, 23b, 36	24	00SV0122
		28	8	00SV0273
E	Ratchet wrench			
F	1/2" drive extension bar	58a	125	-
G	Torque screwdriver	113, 7a	1-6 Nm	00SV0438
H	Torque wrench	9, 18b, 23a, 23b, 28, 36, 58a, 58c	20-100 Nm	00SV0269
I	Hexagon bit	9, 28	8	00SV0010
		113	3	-
J	Ring insert tool	18b, 23a, 23b, 36	24	00SV0524
		28	8	00SV0411
K	Adjusting fork	105a	22	985924
L	Eye bolt	28b	-	00ID2779
M	Torch	113	-	-
N	Rubber hammer	2, 2b, 8	-	00SV0349

6. Instructions for dismantling and assembly

6.1 Dismantling

1. Remove screws (pos. 7a) and coupling guards (pos. 7).
2. Remove screws (pos. 9) and coupling (pos. 8). It may be necessary to loosen the coupling with a rubber hammer.
3. Attach lifting device to eyebolts (pos. 28b).
4. Remove screws (pos. 28). Lift and remove motor and motor stool (pos. 1a).

Caution

To prevent the motor from tipping over, hold it straight when using a lifting device.

5. Remove screws (pos. 58a) and retainer (pos. 58).
6. Clean the shaft end.
7. Slacken the socket screws (pos. 113) of the upper shaft seal (pos. 105a).
8. Carefully press upper shaft seal (pos. 105a) out of the secondary pump head (pos. 2) using two slot screwdrivers, and pull it off the shaft. See fig. 1.

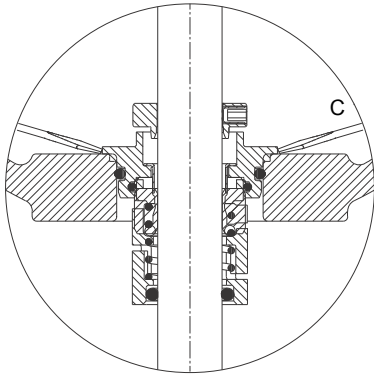


Fig. 1 Removing upper shaft seal

TM06 0090 4813

9. Remove nuts (pos. 36) and washers (pos. 66a).
10. Remove secondary pump head (pos. 2). It may be necessary to loosen it with a rubber hammer.
11. Remove one of the drain plugs (pos. 23a).
12. Slacken the socket screws (pos. 113) of the lower shaft seal (pos. 105b) through the hole for the drain plug.
13. Carefully lift the pump head (pos. 2b) up and remove it from the shaft. It may be necessary to loosen it with a rubber mallet.

Caution

Be sure not to damage the lower shaft seal when lifting the lower pump head.


14. Remove screws (pos. 58c) and retainer (pos. 58b).
15. Press lower shaft seal out of the pump head (pos. 2b) using two slot screwdrivers.
16. Remove O-ring (pos. 37a) and rubber springs (pos. 60) from pump head.
17. Continue the dismantling according to the instructions for dismantling of the standard CR pump.

6.2 Assembly

1. Fit rubber springs (pos. 60) and O-ring (pos. 37) in pump head (pos. 2b).
2. Press lower shaft seal (pos. 105b) down in pump head.
3. Fit retainer (pos. 58b) and cross-tighten screws (58c).
4. Carefully fit pump head on outer sleeve (pos. 55).

Caution *Be sure not to damage the lower shaft seal when fitting the lower pump head.*


5. Fit secondary pump head (pos. 2) on pump head.
6. Fit washers (pos. 66a) and cross-tighten nuts (36).
7. Press upper shaft seal (pos. 105a) down the shaft and into the upper pump head.
8. Fit retainer (pos. 58) and cross-tighten screws (58a).
9. Tighten the socket screws (pos. 113) of the upper shaft seal.
10. Light up the chamber with a torch through one of the holes for the drain plugs (pos. 23a) and tighten the socket screws (pos. 113) of the lower shaft seal (pos. 105b). See fig. 2.

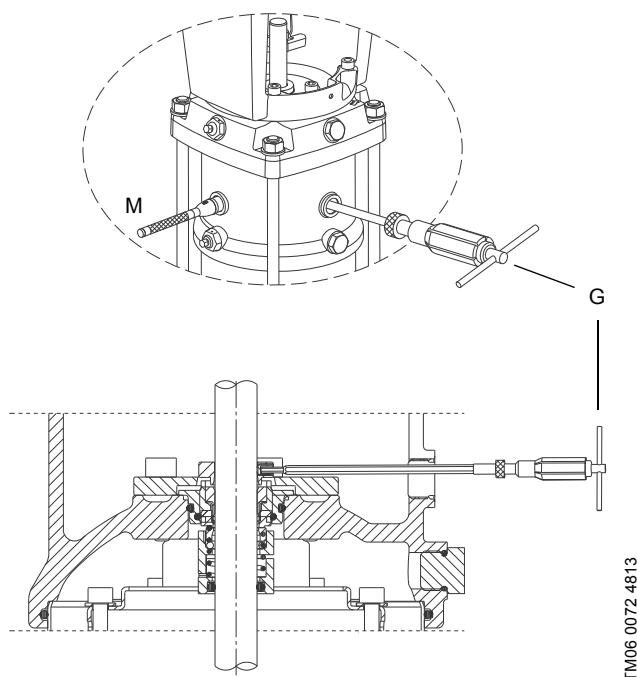

TM06 0072 4813

Fig. 2 Tightening socket screws of lower shaft seal

11. Lift pump shaft and insert an adjusting fork between the shaft seal driver and its retainer. See fig. 3.

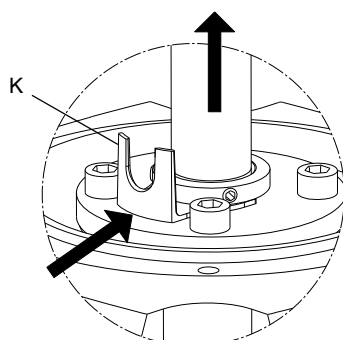

TM06 0071 4813

Fig. 3 Fitting adjusting fork

12. Fit drain plugs.
13. Attach lifting device to eyebolts. Lift and fit motor and motor stool on upper pump head (pos. 2).

Caution *To prevent the motor from tipping over, hold it straight when using a lifting device.*

14. Cross-tighten screws (pos. 28).

15. Fit coupling (pos. 8), according to figs 4 and 5, and tighten screws (pos. 9).

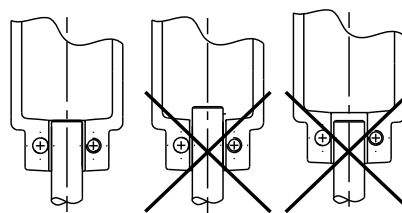


Fig. 4 Fitting coupling

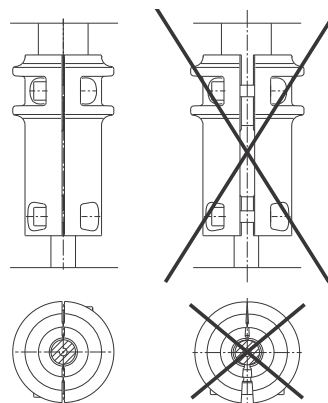


Fig. 5 Adjusting coupling

16. Remove adjusting fork and place it under one of the screws (pos. 58a).
17. Check that the pump shaft can rotate freely.
18. Fit coupling guards (pos. 7) and screws (pos. 7a).

TM05 7578 1213

TM03 9607 4207

7. Exploded view

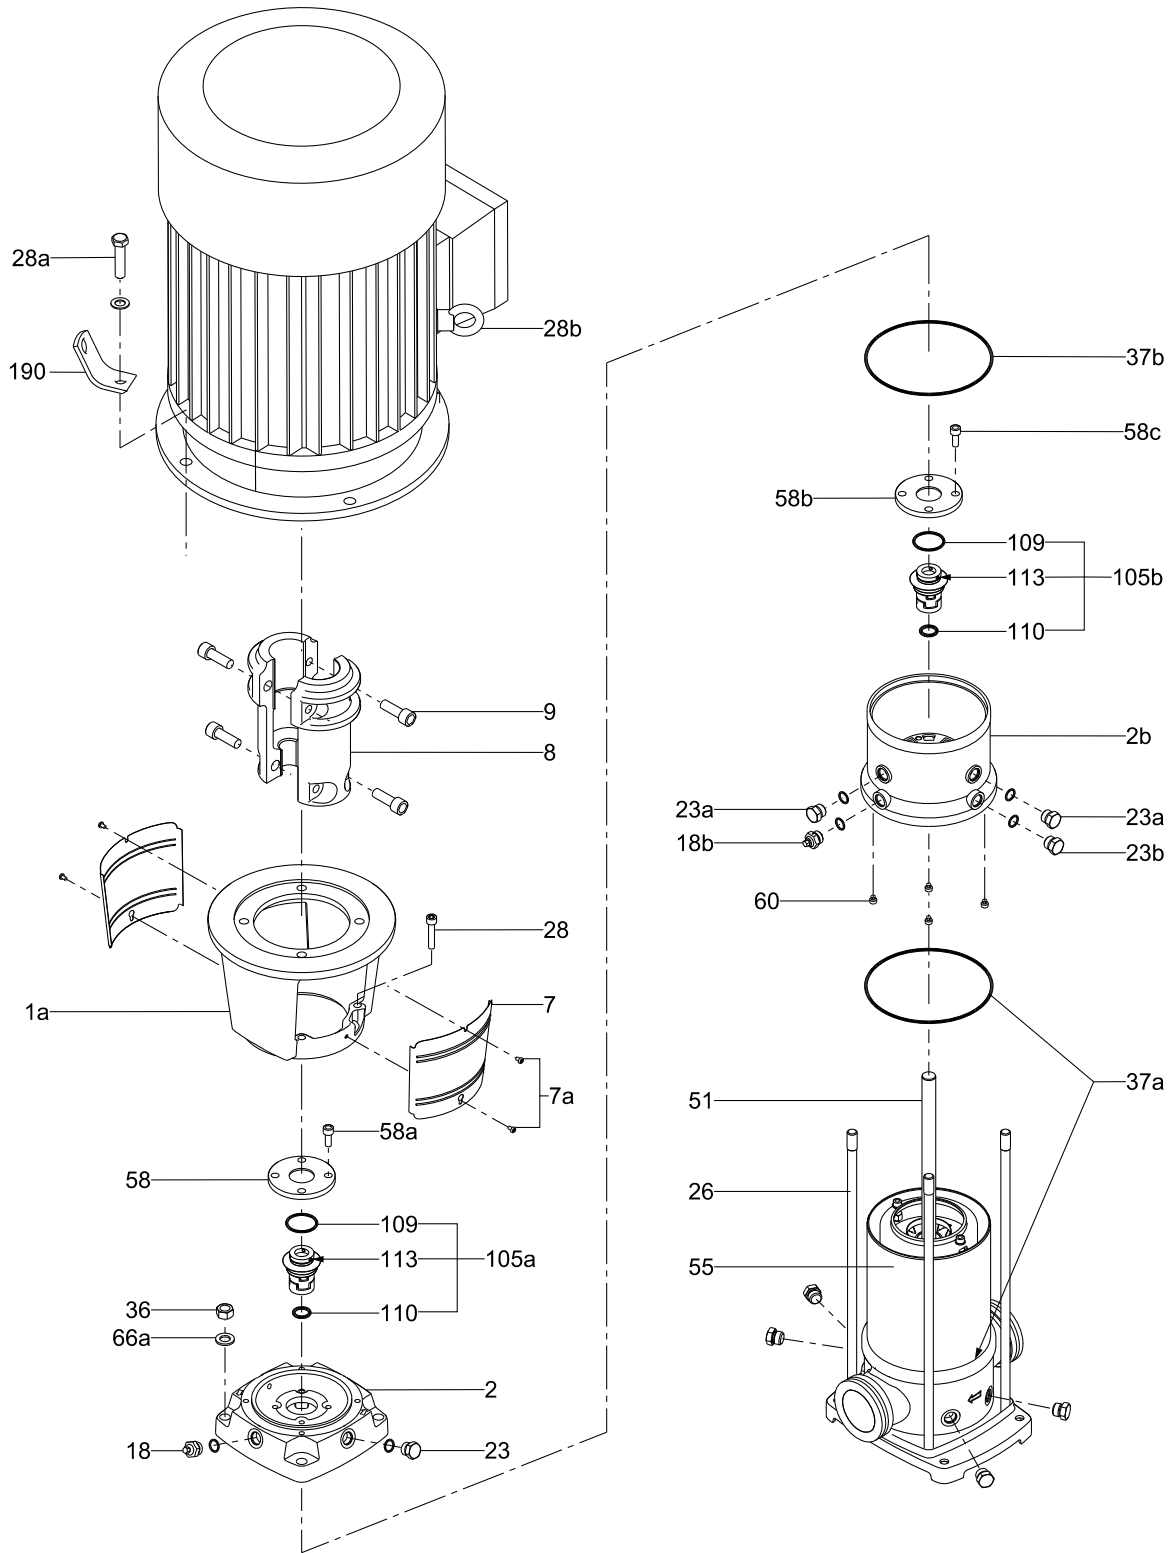


Fig. 6 Exploded view, CR, CRN 32, 45, 64, 90, model B (tandem)

Argentina

Bombas GRUNDFOS de Argentina S.A.
Ruta Panamericana km. 37.500 Centro
Industrial Garin
1619 Garin Pcia. de B.A.
Phone: +54-3327 414 444
Telefax: +54-3327 45 3190

Australia

GRUNDFOS Pumps Pty. Ltd.
P.O. Box 2040
Regency Park
South Australia 5942
Phone: +61-8-8461-4611
Telefax: +61-8-8340 0155

Austria

GRUNDFOS Pumpen Vertrieb Ges.m.b.H.
Grundfosstraße 2
A-5082 Grödig/Salzburg
Tel.: +43-6246-883-0
Telefax: +43-6246-883-30

Belgium

N.V. GRUNDFOS Bellux S.A.
Boomssesteenweg 81-83
B-2630 Aartselaar
Tél.: +32-3-870 7300
Télécopie: +32-3-870 7301

Belarus

Представительство ГРУНДФОС в
Минске
220125, Минск
ул. Шафарьянская, 11, оф. 56, БЦ
«Порт»
Тел.: +7 (375 17) 286 39 72/73
Факс: +7 (375 17) 286 39 71
E-mail: minsk@grundfos.com

Bosna and Herzegovina

GRUNDFOS Sarajevo
Zmaja od Bosne 7-7A,
BH-71000 Sarajevo
Phone: +387 33 592 480
Telefax: +387 33 590 465
www.ba.grundfos.com
e-mail: grundfos@bih.net.ba

Brazil

BOMBAS GRUNDFOS DO BRASIL
Av. Humberto de Alencar Castelo Branco,
630
CEP 09850 - 300
São Bernardo do Campo - SP
Phone: +55-11 4393 5533
Telefax: +55-11 4343 5015

Bulgaria

Grundfos Bulgaria EOOD
Slatina District
Iztochna Tangenta street no. 100
BG - 1592 Sofia
Tel. +359 2 49 22 200
Fax. +359 2 49 22 201
email: bulgaria@grundfos.bg

Canada

GRUNDFOS Canada Inc.
2941 Brighton Road
Oakville, Ontario
L6H 6C9
Phone: +1-905 829 9533
Telefax: +1-905 829 9512

China

GRUNDFOS Pumps (Shanghai) Co. Ltd.
50/F Maxdo Center No. 8 XingYi Rd.
Hongqiao development Zone
Shanghai 200336
PRC
Phone: +86 21 612 252 22
Telefax: +86 21 612 253 33

Croatia

GRUNDFOS CROATIA d.o.o.
Buzinski prilaz 38, Buzin
HR-10010 Zagreb
Phone: +385 1 6595 400
Telefax: +385 1 6595 499
www.hr.grundfos.com

Czech Republic

GRUNDFOS s.r.o.
Čajkovského 21
779 00 Olomouc
Phone: +420-585-716 111
Telefax: +420-585-716 299

Denmark

GRUNDFOS DK A/S
Martin Bachs Vej 3
DK-8850 Bjerringbro
Tlf.: +45-87 50 50 50
Telefax: +45-87 50 51 51
E-mail: info_GDK@grundfos.com
www.grundfos.com/DK

Estonia

GRUNDFOS Pumps Eesti OÜ
Peterburi tee 92G
11415 Tallinn
Tel: + 372 606 1690
Fax: + 372 606 1691

Finland

OY GRUNDFOS Pumput AB
Mestarintie 11
FIN-01730 Vantaa
Phone: +358-(0)207 889 900
Telefax: +358-(0)207 889 550

France

Pompes GRUNDFOS Distribution S.A.
Parc d'Activités de Chesnes
57, rue de Malacombe
F-38290 St. Quentin Fallavier (Lyon)
Tél.: +33-4 74 82 15 15
Télécopie: +33-4 74 94 10 51

Germany

GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath
Tel.: +49-(0) 211 929 69-0
Telefax: +49-(0) 211 929 69-3799
e-mail: infoservice@grundfos.de
Service in Deutschland:
e-mail: kundendienst@grundfos.de

HILGE GmbH & Co. KG

Hilgestrasse 37-47
55292 Bodenheim/Rhein
Germany
Tel.: +49 6135 75-0
Telefax: +49 6135 1737
e-mail: hilge@hilge.de

Greece

GRUNDFOS Hellas A.E.B.E.
20th km. Athinon-Markopoulou Av.
P.O. Box 71
GR-19002 Peania
Phone: +0030-210-66 83 400
Telefax: +0030-210-66 46 273

Hong Kong

GRUNDFOS Pumps (Hong Kong) Ltd.
Unit 1, Ground floor
Siu Wai Industrial Centre
29-33 Wing Hong Street &
68 King Lam Street, Cheung Sha Wan
Kowloon
Phone: +852-27861706 / 27861741
Telefax: +852-27858664

Hungary

GRUNDFOS Hungária Kft.
Park u. 8
H-2045 Törökbálint,
Phone: +36-23 511 110
Telefax: +36-23 511 111

India

GRUNDFOS Pumps India Private Limited
118 Old Mahaballipuram Road
Thoraiakkam
Chennai 600 096
Phone: +91-44 2496 6800

Indonesia

PT GRUNDFOS Pompa
Jl. Rawa Sumur III, Blok III / CC-1
Kawasan Industri, Pulogadung
Jakarta 13930
Phone: +62-21-460 6909
Telefax: +62-21-460 6910 / 460 6901

Ireland

GRUNDFOS (Ireland) Ltd.
Unit A, Merrywell Business Park
Ballymount Road Lower
Dublin 12
Phone: +353-1-4089 800
Telefax: +353-1-4089 830

Italy

GRUNDFOS Pompe Italia S.r.l.
Via Gran Sasso 4
I-20060 Truccazzano (Milano)
Tel.: +39-02-95838112
Telefax: +39-02-95309290 / 95838461

Japan

GRUNDFOS Pumps K.K.
Gotanda Metalion Bldg., 5F,
5-21-15, Higashi-gotanda
Shiagawa-ku, Tokyo
141-0022 Japan
Phone: +81 35 448 1391
Telefax: +81 35 448 9619

Korea

GRUNDFOS Pumps Korea Ltd.
6th Floor, Aju Building 679-5
Yeoksam-dong, Kangnam-ku, 135-916
Seoul, Korea
Phone: +82-2-5317 600
Telefax: +82-2-5633 725

Latvia

SIA GRUNDFOS Pumps Latvia
Deglava biznesa centrs
Augusta Deglava ielā 60, LV-1035, Rīga,
Tālr.: + 371 714 9640, 7 149 641
Fakss: + 371 914 9646

Lithuania

GRUNDFOS Pumps UAB
Smolensko g. 6
LT-03201 Vilnius
Tel: + 370 52 395 430
Fax: + 370 52 395 431

Malaysia

GRUNDFOS Pumps Sdn. Bhd.
7 Jalan Peguam U1/25
Glenmarie Industrial Park
40150 Shah Alam
Selangor
Phone: +60-3-5569 2922
Telefax: +60-3-5569 2866

Mexico

Bombas GRUNDFOS de México S.A. de
C.V.
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
Apodaca, N.L. 66600
Phone: +52-81-8144 4000
Telefax: +52-81-8144 4010

Netherlands

GRUNDFOS Netherlands
Veluwezoom 35
1326 AE Almere
Postbus 22015
1302 CA ALMERE
Tel.: +31-88-478 6336
Telefax: +31-88-478 6332
E-mail: info_gnl@grundfos.com

New Zealand

GRUNDFOS Pumps NZ Ltd.
17 Beatrice Tinsley Crescent
North Harbour Industrial Estate
Albany, Auckland
Phone: +64-9-415 3240
Telefax: +64-9-415 3250

Norway

GRUNDFOS Pumper A/S
Stramsveien 344
Postboks 235, Leirdal
N-1011 Oslo
Tlf.: +47-22 90 47 00
Telefax: +47-22 32 21 50

Poland

GRUNDFOS Pompy Sp. z o.o.
ul. Klonowa 23
Baranowo k. Poznania
PL-62-081 Przemierowo
Tel: (+48-61) 650 13 00
Fax: (+48-61) 650 13 50

Portugal

Bombas GRUNDFOS Portugal, S.A.
Rua Calvet de Magalhães, 241
Apartado 1079
P-2770-153 Paço de Arcos
Tel.: +351-21-440 76 00
Telefax: +351-21-440 76 90

Romania

GRUNDFOS Pompe România SRL
Bd. Biruintei, nr 103
Pantelimon county Ilfov
Phone: +40 21 200 4100
Telefax: +40 21 200 4101
E-mail: romania@grundfos.ro

Russia

ООО Грундфос Россия
109544, г. Москва, ул. Школьная, 39-41,
стр. 1
Тел. (+7) 495 564-88-00 (495) 737-30-00
Факс (+7) 495 564 88 11
E-mail grundfos.moscow@grundfos.com

Serbia

Grundfos Srbija d.o.o.
Omladinskih brigada 90b
11070 Novi Beograd
Phone: +381 11 2258 740
Telefax: +381 11 2281 769
www.rs.grundfos.com

Singapore

GRUNDFOS (Singapore) Pte. Ltd.
25 Jalan Tukang
Singapore 619264
Phone: +65-6681 9688
Telefax: +65-6681 9689

Slovenia

GRUNDFOS d.o.o.
Šlandrova 8b, SI-1231 Ljubljana-Črnuče
Phone: +386 31 718 808
Telefax: +386 (0)1 5680 619
E-mail: slovenia@grundfos.si

South Africa

GRUNDFOS (PTY) LTD
Corner Mountjoy and George Allen Roads
Wilbart Ext. 2
Bedfordview 2008
Phone: (+27) 11 579 4800
Fax: (+27) 11 455 6066
E-mail: lsmart@grundfos.com

Spain

Bombas GRUNDFOS España S.A.
Camino de la Fuentesilla, s/n
E-28110 Algete (Madrid)
Tel.: +34-91-848 8800
Telefax: +34-91-628 0465

Sweden

GRUNDFOS AB
Box 333 (Lunnagårdsgatan 6)
431 24 Mölndal
Tel.: +46 31 332 23 000
Telefax: +46 31 331 94 60

Switzerland

GRUNDFOS Pumpen AG
Bruggacherstrasse 10
CH-8117 Fällanden/ZH
Tel.: +41-1-806 8111
Telefax: +41-1-806 8115

Taiwan

GRUNDFOS Pumps (Taiwan) Ltd.
7 Floor, 219 Min-Chuan Road
Taichung, Taiwan, R.O.C.
Phone: +886-4-2305 0868
Telefax: +886-4-2305 0878

Thailand

GRUNDFOS (Thailand) Ltd.
92 Chaloen Phrakiat Rama 9 Road,
Dokmai, Pravej, Bangkok 10250
Phone: +66-2-725 8999
Telefax: +66-2-725 8998

Turkey

GRUNDFOS POMPA San. ve Tic. Ltd. Sti.
Gebze Organize Sanayi Bölgesi
İhsan dede Caddesi,
2. yol 200, Sokak No. 204
41490 Gebze/ Kocaeli
Phone: +90 - 262-679 7979
Telefax: +90 - 262-679 7905
E-mail: satis@grundfos.com

Ukraine

Бізнес Центр Європа
Столичне шосе, 103
м. Київ, 03131, Україна
Телефон: (+38 044) 237 04 00
Факс: (+38 044) 237 04 01
E-mail: ukraine@grundfos.com

United Arab Emirates

GRUNDFOS Gulf Distribution
P.O. Box 16768
Jebel Ali Free Zone
Dubai
Phone: +971 4 8815 166
Telefax: +971 4 8815 136

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL
Phone: +44-1525-850000
Telefax: +44-1525-850011

U.S.A.

GRUNDFOS Pumps Corporation
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Telefax: +1-913-227-3500

Uzbekistan

Grundfos Tashkent, Uzbekistan The Repre-
sentative Office of Grundfos Kazakhstan in
Uzbekistan
38a, Oybek street, Tashkent
Телефон: (+998) 71 150 3290 / 71 150
3291
Факс: (+998) 71 150 3292

Addresses Revised 24.02.2014

98642935 0314
ECM: 1130534