

# LC 231

## Dual pump unit

### Installation and operating instructions



**LC 231 dual pump unit**  
Installation and operating instructions  
Other languages  
<http://net.grundfos.com/qr/i/99480674>



# LC 231

---

## English (GB)

Installation and operating instructions . . . . . 4

## English (GB) Installation and operating instructions

### Original installation and operating instructions

#### Table of contents

<b>1. General information . . . . .</b>	<b>5</b>	<b>8. Setting the product . . . . .</b>	<b>20</b>
1.1 Hazard statements . . . . .	5	8.1 Setting the application type with Grundfos GO Remote . . . . .	20
1.2 Notes . . . . .	5	8.2 Setting the sensor type . . . . .	20
<b>2. Product introduction . . . . .</b>	<b>5</b>	8.3 Setting the start level . . . . .	20
2.1 Product description . . . . .	5	8.4 Setting the stop level . . . . .	20
2.2 Intended use . . . . .	5	8.5 Setting the high level . . . . .	21
2.3 Features . . . . .	6	8.6 After-run delay, high level . . . . .	21
2.4 Application types . . . . .	6	8.7 Stop delay . . . . .	21
2.5 Terminals . . . . .	7	8.8 Power-on delay . . . . .	21
2.6 Identification . . . . .	8	8.9 Dry-running protection . . . . .	21
2.7 Supported communication interface modules and protocols . . . . .	8	8.10 Using the same level switch for the start and stop level . . . . .	22
<b>3. Installation requirements . . . . .</b>	<b>8</b>	8.11 Multipump settings . . . . .	22
3.1 Location . . . . .	8	8.12 Antiseizing . . . . .	22
<b>4. Mechanical installation . . . . .</b>	<b>9</b>	8.13 Signal-detection time . . . . .	22
4.1 Mounting the rubber seals . . . . .	9	8.14 Setting the maximum number of restarts with Grundfos GO Remote . . . . .	22
4.2 Removing the front cover . . . . .	9	8.15 Setting the service interval with Grundfos GO Remote . . . . .	23
4.3 Disconnecting the front cover . . . . .	10	8.16 Operating the product . . . . .	23
4.4 Installing the control unit . . . . .	10	8.17 Motor protection . . . . .	23
4.5 Installing a communication interface module . . . . .	11	8.18 Alarm reset . . . . .	24
4.6 Removing the membrane . . . . .	11	8.19 Setting the buzzer with Grundfos GO Remote . . . . .	25
<b>5. Electrical connection . . . . .</b>	<b>12</b>	8.20 Setting units for Grundfos GO Remote . . . . .	25
5.1 Cable requirements . . . . .	12	8.21 Setting units for the operating panel with Grundfos GO Remote . . . . .	25
5.2 Protection of controller and supply cables . . . . .	12	8.22 GENbus . . . . .	25
5.3 Connecting the pump supply and power supply . . . . .	12	8.23 Security . . . . .	25
5.4 Recommended disconnect devices . . . . .	15	8.24 Starting the startup wizard with the operating panel . . . . .	26
5.5 Connecting a level sensor . . . . .	15	<b>9. Servicing the product . . . . .</b>	<b>27</b>
5.6 Connecting an alarm device . . . . .	16	9.1 Updating the product software . . . . .	27
<b>6. Starting up the product . . . . .</b>	<b>17</b>	9.2 Replacing the battery . . . . .	27
6.1 Connecting to Grundfos GO Remote . . . . .	17	9.3 Replacing the CIM module . . . . .	27
6.2 Startup wizard on Grundfos GO Remote . . . . .	17	<b>10. Fault finding the product . . . . .</b>	<b>28</b>
6.3 Startup wizard on the operating panel . . . . .	17	10.1 Overview of alarm and warning codes . . . . .	28
6.4 How to enable Bluetooth on the operating panel . . . . .	17	10.2 Code 2 (Power phase missing) . . . . .	29
6.5 How to disable Bluetooth on the operating panel . . . . .	17	10.3 Code 4 (Too many motor restarts) . . . . .	29
6.6 Configuring the IO terminals using Grundfos GO Remote . . . . .	18	10.4 Code 9 (Power phase sequence wrong) . . . . .	29
6.7 Testing the product . . . . .	18	10.5 Code 12 (Service needed) . . . . .	30
<b>7. Control functions . . . . .</b>	<b>18</b>	10.6 Code 22 (Moisture in motor of pump) . . . . .	30
7.1 Operating panel . . . . .	18	10.7 Code 25 (Wrong configuration) . . . . .	30
		10.8 Code 26 (Contactor shorted) . . . . .	30
		10.9 Code 48 (Motor is overloaded) . . . . .	31
		10.10 Code 51 (Blocked) . . . . .	31
		10.11 Code 56 (Underload, current sensor measures a value too low) . . . . .	32
		10.12 Code 57 (Missing water in the application) . . . . .	32

10.13	Code 69 (Winding temperature too high)	33
10.14	Code 72 (Internal fault)	33
10.15	Code 76 (Internal fault)	34
10.16	Code 84 (Memory storage media faulty)	34
10.17	Code 85 (Internal fault)	34
10.18	Code 117 (Door opened)	35
10.19	Code 157 (Real-time clock monitoring)	35
10.20	Code 159 (Communication error CIMxxx)	35
10.21	Code 163 (Motor-drive protection function measurement fault)	36
10.22	Code 165 (Signal fault)	37
10.23	Code 181 (Signal fault, PTC input)	37
10.24	Code 191 (High water level)	38
10.25	Code 205 (Level switch inconsistency)	38
10.26	Code 220 (Contactor wear out)	39
10.27	Code 229 (Water on floor)	39
<b>11.</b>	<b>Technical data</b>	<b>40</b>
11.1	Electrical data	40
11.2	Mechanical data	40
11.3	Environmental data	41
11.4	Temperature	41
<b>12.</b>	<b>Disposing of the product</b>	<b>41</b>
<b>13.</b>	<b>Document quality feedback</b>	<b>41</b>

## 1. General information



Read this document before you install the product. Installation and operation must comply with local regulations and accepted codes of good practice.

### 1.1 Hazard statements

The symbols and hazard statements below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



#### DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious personal injury.



#### WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.



#### CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate personal injury.

The hazard statements are structured in the following way:



#### SIGNAL WORD

##### Description of the hazard

Consequence of ignoring the warning

- Action to avoid the hazard.

### 1.2 Notes

The symbols and notes below may appear in Grundfos installation and operating instructions, safety instructions and service instructions.



Observe these instructions for explosion-proof products.



A blue or grey circle with a white graphical symbol indicates that an action must be taken.



A red or grey circle with a diagonal bar, possibly with a black graphical symbol, indicates that an action must not be taken or must be stopped.



If these instructions are not observed, it may result in malfunction or damage to the equipment.



Tips and advice that make the work easier.

## 2. Product introduction

### 2.1 Product description

The level-control unit switches the pump on and off according to the liquid level measured by float switches or a pressure sensor. When the start level is reached, the pump starts, and when the liquid level has been lowered to the stop level, the pump is stopped by the control unit. An alarm is indicated in case of for example high-water level in the tank or sensor failure.

Basic settings are configured via the operating panel and advanced settings are configured with Grundfos GO Remote. Furthermore, you can read important operating parameters with Grundfos GO Remote.

### 2.2 Intended use

The product is designed to control one pump or two pumps.

The product can be configured for two purposes: emptying a wastewater pit or filling a pit or tank. The product can be used for network pumping stations, main pumping stations, commercial buildings and municipal systems.

If the product is used in an explosive environment, follow local regulations. If required use additional equipment.

The product must not be exposed to aggressive solvents or oil-containing liquids.

### 2.3 Features

The control unit features among others the following functions:

- support of up to two pumps
- manual and automatic control of the pump
- Bluetooth pairing with Grundfos GO Remote
- operating indication, such as power on and pump running
- alarm and warning indication, such as power phase missing and high-water level
- motor and phase failure protection
- setting of stop delays matching the actual operating conditions
- automatic alternation of pumps.


### 2.4 Application types

You can choose between two application types:

- **Emptying**
- **Fill.**

You can set the application type with Grundfos GO Remote.

#### Emptying

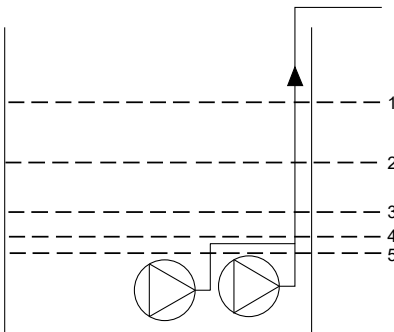

TM0713341

Pos.	Description
1	<b>High level</b>
2	<b>Start level P2:</b> start level for pump 2
3	<b>Start level P1:</b> start level for pump 1
4	<b>Stop level</b>
5	<b>Dry-running level</b>

The pump starts to empty the tank or well when **Start level P1** is reached.


A second pump starts when the liquid level reaches **Start level P2**.

The pump stops when the liquid level is lowered to **Stop level**.

If the inflow of liquid exceeds the capacity of the installed pump, the level in the tank or well starts to rise. Eventually, the **High level** sensor registers a high liquid level in the tank or well. If set, the signal from the **High level** sensor can be used to activate an output relay which can then be used to give a visual or acoustic alarm or send a signal to a SCADA system.

If the pump is running and the liquid level in the tank or well falls below the dry-running level, the dry-running protection stops the pump to ensure that it is not damaged mechanically.

#### Fill

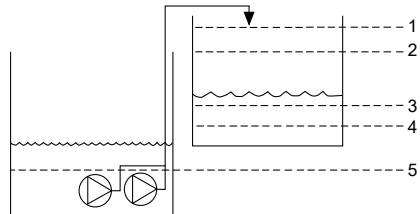

TM0713351

Pos.	Description
1	<b>High level</b>
2	<b>Stop level</b>
3	<b>Start level P1:</b> start level for pump 1
4	<b>Start level P2:</b> start level for pump 2
5	<b>Dry-running level</b>

In the filling application, the pump is installed in a tank or well from where it pumps the liquid. The liquid is pumped into a second tank where the level sensors are installed.

The pump starts to fill the second tank when **Start level P1** is reached.

A second pump starts when the liquid level reaches **Start level P2**.

The pump stops when the liquid level reaches **Stop level**.

If the pump for some reason does not stop at **Stop level** and the liquid level keeps rising, the **High level** sensor eventually registers this. If set, the signal from the **High level** sensor can be used to activate a relay

output which can then be used to give a visual or acoustic alarm or send a signal to a SCADA system via a communication interface.


If the pump is running and the liquid level in the tank falls below the dry-running level, the dry-running protection stops the pump to ensure that it is not damaged.

## Related information

[8.1 Setting the application type with Grundfos GO Remote](#)


[8.16.1 Automatic operation](#)

## 2.5 Terminals

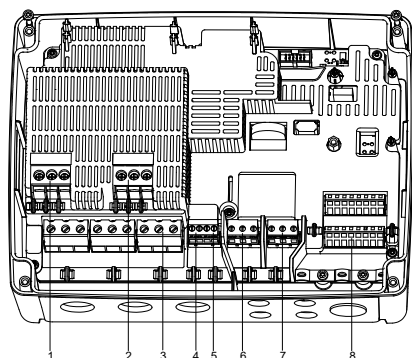

TM070123

Pos.	Description
1	Contacteur for pump 1
2	Contacteur for pump 2
3	Terminal block for the power supply
4	Terminal block for temperature and moisture-protection sensor for pump 1
5	Terminal block for temperature and moisture-protection sensor for pump 2
6	Alarm 1
7	Alarm 2
8	Analog and digital inputs and outputs.

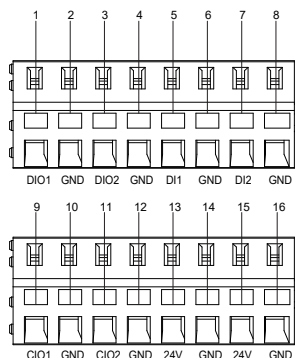

TM070124

Connect to Grundfos GO Remote to see which options are available for the input and output terminals.


Pos.	Description
1	Digital input/output 1, configurable
2	GND
3	Digital input/output 2, configurable
4	GND
5	Digital input 1
6	GND
7	Digital input 2
8	GND
9	Configurable input/output 1
10	GND
11	Configurable input/output 2
12	GND
13	Supply voltage, 24 V, max. 200 mA
14	GND
15	Supply voltage, 24 V, max. 200 mA
16	GND

## Related information

[6.6 Configuring the IO terminals using Grundfos GO Remote](#)

## 2.6 Identification

### 2.6.1 Nameplate

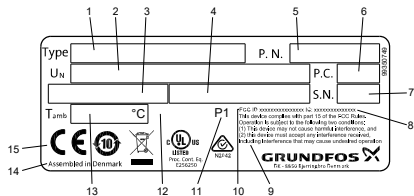

TM072267

Pos.	Description
1	Product name
2	Supply voltage
3	Maximum current
4	Maximum start current
5	Version number and material number
6	Production code (year and week)
7	Serial number
8	IC, only for UL variants
9	FCC text, only for UL variants
10	FCC ID, only for UL variants
11	Factory code
12	IP class
13	Minimum to maximum ambient temperature
14	Production site
15	Markings and approvals

### 2.6.2 Type key for LC 231

Example	LC 231	2x	1-9	DOL	PI
Pos.	1	2	3	4	5

Pos.	Description
1	Type: <ul style="list-style-type: none"> <li>LC 231: wall-mounted version</li> </ul>
2	Number of pumps supported
3	Current range of pump [A]
4	Starting method: <ul style="list-style-type: none"> <li>DOL: direct-on-line</li> </ul>
5	Panel type: <ul style="list-style-type: none"> <li>PI: Plastic enclosure</li> </ul>

## 2.7 Supported communication interface modules and protocols

The following Grundfos communication interface modules can be added to the product.

Communication interface module	Protocol
CIM 050	GENiBus
CIM 150	PROFIBUS DP
CIM 200	Modbus RTU
CIM 260	3G/4G
CIM 270 <sup>1)</sup>	GRM
CIM 280 <sup>1)</sup>	Grundfos Utility Connect
CIM 300	BACnet
	Modbus TCP
CIM 500	PROFINET IO
	GRM IP

<sup>1)</sup> Not supported.

### Related information

#### [4.5 Installing a communication interface module](#)

## 3. Installation requirements

### 3.1 Location

Install the product in a location that meets the following requirements:


- Place the product in a flood-safe place.
- Make sure that the ambient temperature is within the limits.
- Install the product as close as possible to the connected pumps, sensors, and accessories.
- The product must be protected from direct sunlight.
- The product must be easily accessible.
- We recommend that you install the product in a protective shed or enclosure to avoid direct sunlight and rain.
- Indoor installation: The product must be installed in a well-ventilated room to ensure cooling of its components.




## 4. Mechanical installation

### 4.1 Mounting the rubber seals

1. Mount the supplied rubber seals on the cable glands.

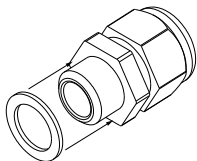

2. Mount the cable glands on the control unit.

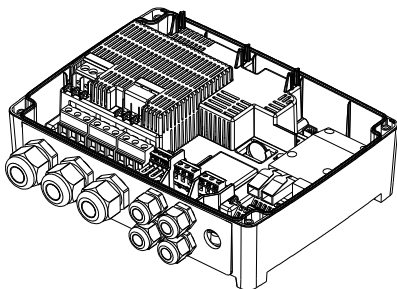

Do not tighten the cable glands too much since this may damage the rubber seals.

#### Related information

[5.3 Connecting the pump supply and power supply](#)

### 4.2 Removing the front cover


The front cover must be removed to make any connections or to install the Communication Interface Module (CIM).



Use an antistatic service kit when handling electronic components. This prevents static electricity from damaging the components.

Place the front cover above the control unit, if possible. This way, you do not need to remove the flat cable between the front cover and the control unit.

1. Loosen the screws.
2. Carefully separate the front cover from the back cover.  
Be careful not to damage the cable connecting the front cover and the back cover.
3. Place the front cover above the back cover on the support brackets.
4. To ensure that the front cover does not tilt, insert the two bottom screws into the open holes at the top of the back cover.

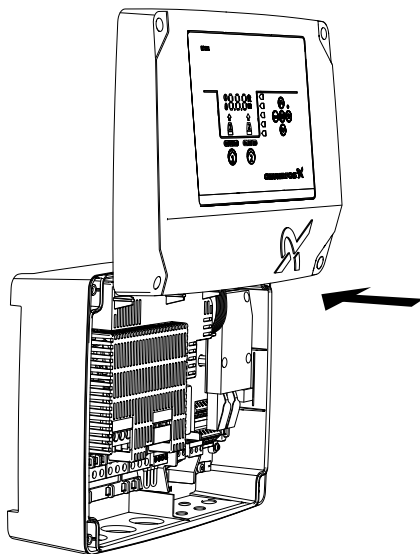

When you mount the front cover again, tighten the screws to 1.25 Nm.

TM074473

TM074474

TM071322

## Related information

- [4.4 Installing the control unit](#)
- [4.5 Installing a communication interface module](#)
- [5.5 Connecting a level sensor](#)
- [6.6 Configuring the IO terminals using Grundfos GO Remote](#)


## 4.3 Disconnecting the front cover

If you need to remove the front cover completely, you must remove the flat cable between the front cover and the back cover.



Use an antistatic service kit when handling electronic components. This prevents static electricity from damaging the components.

1. Loosen the screws.
2. Carefully separate the front cover from the back cover.
3. Pull out the flat cable that is connected to the circuit board. Do not remove the flat cable from the front cover.

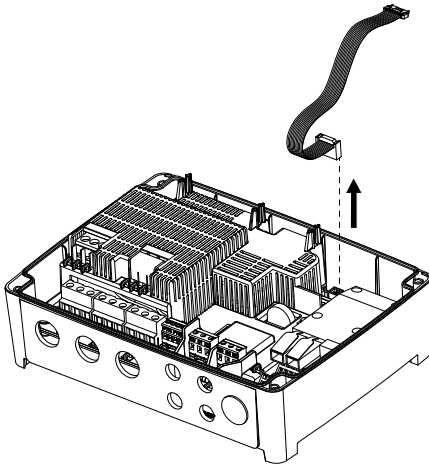


TM071323

## 4.4 Installing the control unit

The product is designed to be mounted on a flat and vertical surface. The cable glands must face downwards.

1. Loosen the screws and remove the front cover.  
Be careful not to damage the cable between the front cover and the back cover.
2. Drill holes in the surface.

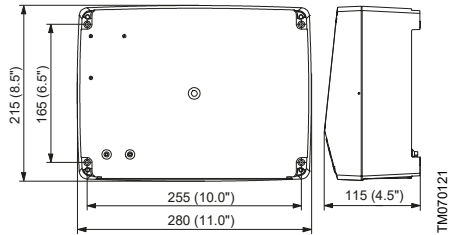

3. Insert wall plugs, if applicable.
4. Fit the four screws in the mounting holes and cross-tighten the screws, 1.25 Nm.



The mounting screws must have a minimum length of 32 mm (Ø 8.2 mm). If the wall is more than 3 mm uneven, insert rubber blocks between the surface and the control unit to even the surface. The box of the control unit must not be bent.

## Related information

- [4.2 Removing the front cover](#)


## 4.5 Installing a communication interface module

You can fit a communication interface module (CIM) in the control unit to enable communication with external systems. The module is optional and is not delivered with the product. See the installation and operating instruction for the module regarding electrical connections.



Use an antistatic service kit when handling electronic components. This prevents static electricity from damaging the components.

1. Loosen the screws and remove the front cover. Be careful not to damage the cable between the front cover and the back cover.
2. Push the module onto the three guide pins and into the socket. Press the module home, using your fingers.

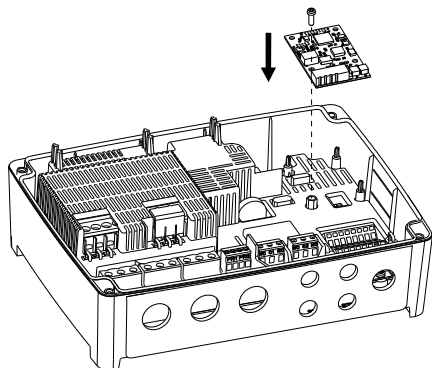

TM070130

3. Fit the screw to lock the module.
4. Place the labels supplied with the module on the back of the front cover.
5. Make the electrical connections to the module as described in the instructions supplied with the module.
6. Route the wires for the module through one of the cable glands.  
For modules with LAN or antenna cables, you must order an additional cable gland M20.
7. Fit the cover and cross-tighten the mounting screws.

### Related information

[2.7 Supported communication interface modules and protocols](#)


[4.2 Removing the front cover](#)

[10.20 Code 159 \(Communication error CIMxxx\)](#)

## 4.6 Removing the membrane

For applications where drainage is required, the membrane must be removed.

1. Pull the membrane off the back of the control unit.

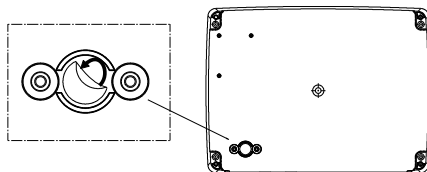

TM074551

## 5. Electrical connection

### 5.1 Cable requirements

#### WARNING

##### Electric shock

Death or serious personal injury



- The wires from the pump phases must be rated at 90 °C (194 °F).
- The wires from the temperature sensor, if any, must be rated at 480 V and 70 °C (158 °F).



For the US market only, use flexible metal conduits (FMC).



Changes or modifications not expressly approved by Grundfos may void the user's authority to operate the equipment.

#### Cable cross-sections

Type of cable	Stranded with ferrule		Solid	
	[mm <sup>2</sup> ]	[AWG]	[mm <sup>2</sup> ]	[AWG]
Contactors for the pump	1.5 - 2.5	16-14	1.5 - 4	16-12
Terminal block for the power supply	2.5 - 10	14-8	2.5 - 16	14-6

### 5.2 Protection of controller and supply cables

The controller and power cables must be protected against short-circuits and overloads. The protection must be accomplished using components such as:

- fuse of melt type gL and gG
- fuse type gD
- circuit breaker of type C.

See the rated current for this specific product on the product nameplate.

#### Related information

[11.2 Mechanical data](#)

### 5.3 Connecting the pump supply and power supply

Pumps may be equipped with PTC/Klixon sensors (thermal switched) which protect against overheating. Some also have moisture sensors indicating water in the pump.

#### DANGER

##### Electric shock

Death or serious personal injury



- In case of an insulation fault, the fault current may be a pulsating DC. Observe national legislation about requirements for and selection of Residual Current Device (RCD) when installing the product.

#### WARNING

##### Electric shock

Death or serious personal injury

- Switch off the power supply before making any electrical connections. Make sure that the power supply cannot be switched on accidentally.
- Remember to indicate where the main switch is located by placing a label or similar marking on the control unit.
- Make sure that the voltage between the phase and neutral does not exceed 250 VAC.
- Electrical connections must be carried out according to the wiring diagrams.
- If an external disconnect switch or plug is installed to disconnect each pump from the power supply, the disconnect switch or plug must disconnect both the power and the PTC wires.



Do not add additional components other than those illustrated on the wiring diagram. Do not use unused pin holes for other connections.

All cable glands and plugs must be mounted after the installation is completed.



If the gaskets are not pre-mounted on the cable glands, mount them on the cable glands before the control unit is mounted on the wall.



For the PTC connection, do not connect the third wire (common wire) in the control unit. It must be isolated with a cable-end cap.

Take into account the total leakage current of all the electrical equipment in the installation.

1. Check that the supply voltage and frequency correspond to the values stated on the nameplate.
2. Cut the power supply and pump cables as short as possible.


- Before switching the power on, check all voltages with a multimeter and make sure that the voltage between neutral and each phase does not exceed 250 VAC.
- Connect the power cables and pump cables according to the relevant electrical diagram, including the cables from the motor temperature and moisture sensor, if any. Tighten the terminal screws to the correct torque. See the table below.



- All wires must be secured inside the cabinet using cable ties.
- The wires must not cross the safety barriers between the connectors.
- All cable glands must be mounted and plugged, even if they are not in use, to ensure the correct IP protection level.

Remember to remove the jumper from the PTC terminal if you are connecting cables from the temperature sensor to the PTC terminals.

Terminal block	Torque [Nm]
Pump contactor	1.2 - 1.5
Power supply	1.2 - 1.5
Cable glands	2.5

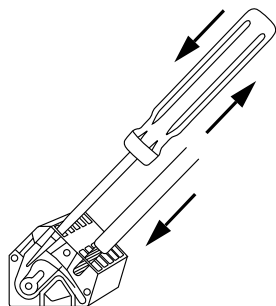


TM070570

Connecting a wire to a terminal with spring clamps

- Tie the pump phase cable(s) to the protection cover with cable ties.
- In case there is only a PTC sensor present in the pump, the two wires from the PTC sensor have to be connected directly to the PTC terminals.

- In cases where PTC and moisture sensors are present, you end up with three wires: a PTC wire, a moisture sensor wire and a common wire. Connect only the PTC wire and the moisture sensor wire. The common wire must be isolated. In Grundfos GO Remote, you must select that both the PTC wire and the moisture sensor wire are connected, and select a cool-down time for the thermal protection.

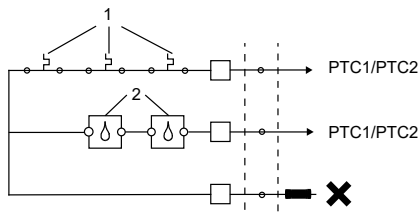


TM076634

PTC connection

Pos.	Description
1	PTC/Klixon sensors
2	Moisture sensors




The control unit only supports standard pumps and not sensor-variant pumps.

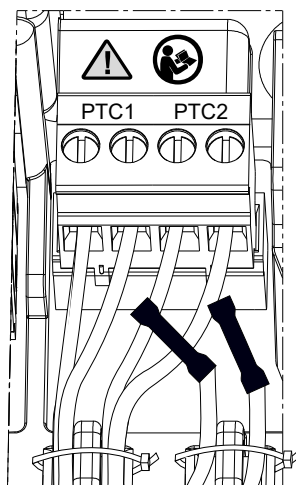

TM076640


Recommended PTC wiring

**Example:**

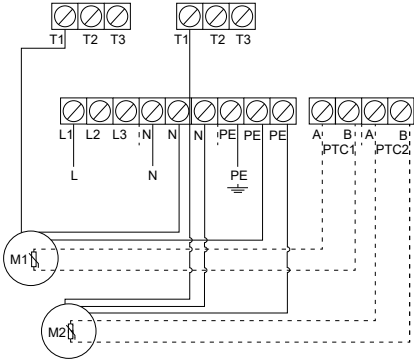


TM070125

Single-phase connections for two pumps

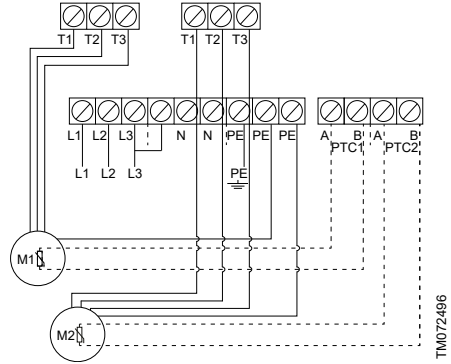

TM072496

Three-phase connections for two pumps without neutral, for Norway only

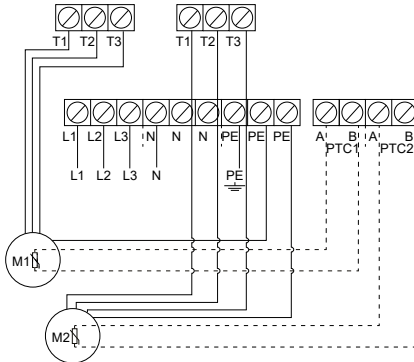

TM070126

Three-phase connections for two pumps

**Related information**

[4.1 Mounting the rubber seals](#)

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

[10.2 Code 2 \(Power phase missing\)](#)


[10.4 Code 9 \(Power phase sequence wrong\)](#)

[10.23 Code 181 \(Signal fault, PTC input\)](#)


### 5.4 Recommended disconnect devices

If an external disconnect device is installed for the pump cable, such as a service disconnect switch, we recommend using one of the following components:

- 7-pole CEE plug and connector  
To disconnect the pump and the PTC/moisture sensors during operation, we recommend installing a 7-pole CEE plug and connector on the pump cable. This solution allows the complete disconnection of the pump for servicing purposes.

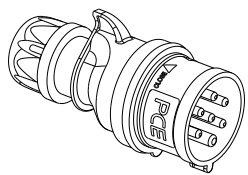


7-pole CEE plug and connector, male

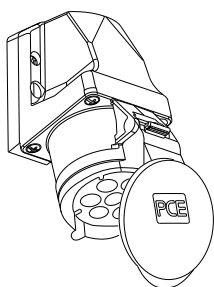

7-pole CEE plug and connector, female

- 6-pole + PE mains switch  
Mount a 6-pole + PE mains switch.

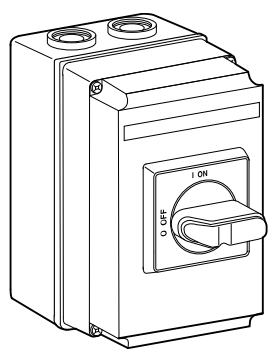


Both solutions ensure that you can easily disconnect one pump from the controller, while the controller can still operate with the second pump in a two-pump setup.

### 5.5 Connecting a level sensor

You can either connect an analog level sensor, such as a pressure sensor, or digital level sensors, such as float switches.

1. Loosen the screws and remove the front cover.  
Be careful not to damage the cable between the front cover and the back cover.
2. Lead the wires through one of the cable glands.
3. Depending on the type of wire, take one of the following actions:
  - For a shielded wire, lead it through the cable clamp.


TM089238

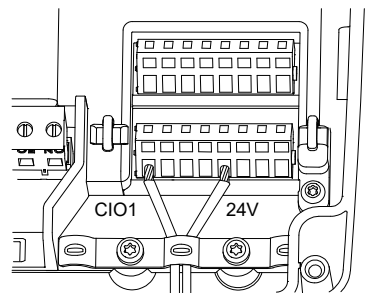


TM070571

- For a not shielded wire, attach it to the protection cover with a cable tie.

TM089239

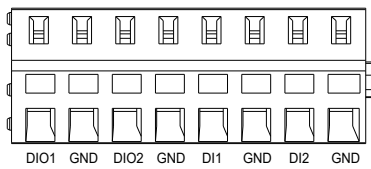


TM070760

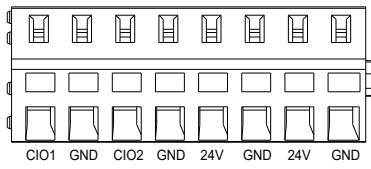

TM057581

4. Depending on the type and function of the sensor, connect the wires to the following terminals. When using an analog sensor, level switches can be used to add redundancy or security by adding an extra dry-running sensor or high-level sensor or both.

Sensor type	Sensor function	Terminals
Analog	All levels	CIO1 - 24 V
	Dry-running level	CIO2 - GND
	Stop level	DIO1 - GND
Digital	Start level, pump 1	DIO2 - GND
	Start level, pump 2	DI1 - GND
	High level	DI2 - GND

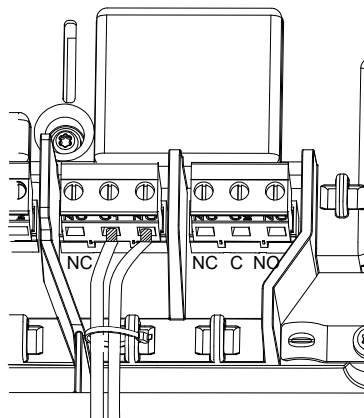

TM070569

### Related information

[4.2 Removing the front cover](#)

[6.6 Configuring the IO terminals using Grundfos GO Remote](#)

### 5.6 Connecting an alarm device

You can connect an alarm device, such as a buzzer or a lamp, to the output relays **Alarm 1** and **Alarm 2**. The control unit triggers the alarm device when it detects an alarm or a warning. You can change the behaviour of the outputs with Grundfos GO Remote under **Relay output 1** and **Relay output 2**.

You can also set the alarm device to be activated during normal operation. It will only be deactivated in case of an alarm, a warning or mains failure. The setting is made in Grundfos GO Remote.

Go to **Settings > LC 231 IO terminals > Relay output > Function**.

#### Default settings of the terminal blocks

Terminal block	Default function
Alarm 1	All alarms
Alarm 2	High level

- Loosen the screws and remove the front cover. Be careful not to damage the cable between the front cover and the back cover.
- Lead the wires through one of the cable glands.
- Depending on the type of the alarm device, connect the wires to the relevant terminals. Note that all wires must be secured inside the cabinet using cable ties.
  - NO** (Normally Open) and **C** (Common)
  - NC** (Normally Closed) and **C** (Common).
- Tie the wires with cable ties.



## 6. Starting up the product

### 6.1 Connecting to Grundfos GO Remote

Before connecting the product to Grundfos GO Remote, the Grundfos GO Remote app must be downloaded to your smartphone or tablet. The app is free of charge and available for iOS and Android devices.

1. Open Grundfos GO Remote on your device. Make sure that Bluetooth is enabled.  
Your device must be within reach of the product to establish Bluetooth connection.
2. Press the Bluetooth **CONNECT** button on Grundfos GO Remote.
3. Press the connect button on the operating panel. The blue LED above the connect button is flashing until your device is connected. Once the connection is established, the LED will be permanently on.  
Grundfos GO Remote is now loading the data for the product.

#### Related information

[6.4 How to enable Bluetooth on the operating panel](#)

[6.5 How to disable Bluetooth on the operating panel](#)

### 6.2 Startup wizard on Grundfos GO Remote

The product is designed for Bluetooth communication with Grundfos GO Remote.

Once you have connected your product to Grundfos GO Remote, a startup wizard appears. Follow the instructions to make your settings.

Grundfos GO enables you to set functions and gives you access to status overviews, technical product information and current operating parameters.

### 6.3 Startup wizard on the operating panel

The first time the control unit is switched on, a startup wizard will guide you through the basic settings. You can select the sensor type and sensor levels. For some products, you can also set the nominal pump current and number of phases.

If you have an analog sensor, select **S-1** and set the height of the different levels, from dry running to high level.

If you have a digital sensor, select **S-2** and enable or disable the dry-running level, the start level for pump 2, if available and the high level.

To change settings, use the **Up** and **Down** buttons on the operating panel.

Use the **OK** button to confirm each setting and navigate to the next setting.

For filling applications, you must use Grundfos GO Remote. Units can only be changed with Grundfos GO Remote.

Designation	Description
<b>S-1</b>	Analog sensor
<b>S-2</b>	Digital sensor
<b>-- A</b>	Nominal current (see the nameplate of the pump)
<b>1Ph</b>	Single-phase
<b>3Ph</b>	Three-phase

#### Related information

[8.1 Setting the application type with Grundfos GO Remote](#)

[8.24 Starting the startup wizard with the operating panel](#)

### 6.4 How to enable Bluetooth on the operating panel

If the Bluetooth signal on the operating panel has been disabled for some reason, you are not able to connect with Grundfos GO Remote. You must enable Bluetooth first.

1. Press and hold the connect button on the operating panel for 15 seconds. Wait for the blue LED to light up.
2. Press the Bluetooth **CONNECT** button on Grundfos GO Remote.
3. Press the connect button on the operating panel. The blue LED above the connect button is flashing blue until your device is connected.  
Grundfos GO Remote is now loading the data for the product.

#### Related information

[6.1 Connecting to Grundfos GO Remote](#)

### 6.5 How to disable Bluetooth on the operating panel

In some installation areas, it is not allowed to have a Bluetooth signal enabled during operation. After installation, the Bluetooth signal must be disabled manually.

1. Press and hold the connect button on the operating panel for 15 seconds. Wait for the blue LED to switch off.  
Grundfos GO Remote is no longer connected to the product.

#### Related information

[6.1 Connecting to Grundfos GO Remote](#)

## 6.6 Configuring the IO terminals using Grundfos GO Remote

The control unit is equipped with configurable input and output terminals. Using Grundfos GO Remote, you can configure the terminals for different functions, depending on the device connected to the terminals.

1. Go to **Settings > LC 231 IO terminals**.
2. Select the terminal you wish to configure and follow on-screen instructions.



You can find the names of the terminals inside the control unit.

### Related information

- [2.5 Terminals](#)
- [4.2 Removing the front cover](#)
- [5.5 Connecting a level sensor](#)
- [10.7 Code 25 \(Wrong configuration\)](#)
- [10.24 Code 191 \(High water level\)](#)
- [10.25 Code 205 \(Level switch inconsistency\)](#)

## 6.7 Testing the product

When you have made all the electrical installations and completed the startup wizard, you can test the system.

### For emptying applications:

- Fill the pit with water and check that the pump starts automatically at the defined level.
- Test the dry-running function by starting the pump manually and wait while the pit with the pump is emptied. Check that the control unit indicates an alarm and stops the pump when the defined level is reached.
- Test the high-level function by stopping the pump manually and continue to fill the pit with water. Check that the control unit indicates an alarm when the defined level is reached. Set the pump to **Auto** and observe that the pump starts and stops when the stop level has been reached.


### For filling applications:

- Start by draining the tank to be filled. When the tank is empty and the start level is reached, the pump must start. When the tank is full and the stop level is reached, the pump must stop.
- Test the high-level function by stopping the pump manually and continue to fill the tank without the pump with water. Check that the control unit indicates an alarm when the defined level is reached.
- Test the dry-running function by starting the pump manually and wait while the tank with the pump is emptied. Check that the control unit indicates an alarm and stops the pump when the defined level is reached. If the pump is placed in a well, this test




may not be possible since the pump cannot empty the well. Alternatively, pull the dry-run level switch up to simulate a dry-run situation. The same can be done with a pressure level sensor.

## 7. Control functions
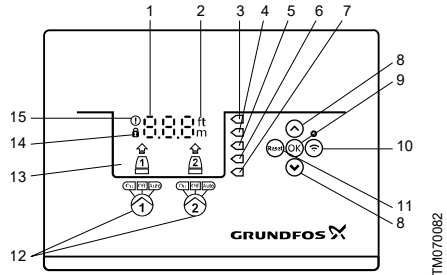
### 7.1 Operating panel



Pos.	Symbol	Description
1		Display
2		Units
3		High level
4		Start level, pump 2
5		Start level, pump 1
6		Stop level, pump 1 and 2
7		Dry-running level
8		<b>Up/Down buttons:</b> <ul style="list-style-type: none"> <li>• Press these buttons to navigate between submenus or change the value settings.</li> </ul>
9		<b>OK button:</b> <ul style="list-style-type: none"> <li>• Press this button to save changed values.</li> </ul>
10		<b>Connect button:</b> <ul style="list-style-type: none"> <li>• Press this button to connect the control unit to Grundfos GO Remote via Bluetooth.</li> </ul>
11		<b>Reset button:</b> <ul style="list-style-type: none"> <li>• Press this button during startup to reset settings and start over or to reset an alarm or warning.</li> </ul>

Pos.	Symbol	Description
12		<p>Operating mode for the pump:</p> <ul style="list-style-type: none"> <li>• On: The pump has been switched on manually.</li> <li>• Off: The pump has been switched off manually.</li> <li>• Auto: The pump is running automatically based on settings.</li> </ul>
13	Display	The display shows the pump status.
14		<p>Lock symbol:</p> <p>If the symbol is lit, the control unit is locked from making changes.</p>
15		<p>Alarm and warning symbol:</p> <p>Red: Alarm</p> <p>Yellow: Warning</p>

The control unit enables manual setting and monitoring of the system.

## 8. Setting the product



Make sure that all settings are entered according to the pump and system requirements to avoid malfunction.

### 8.1 Setting the application type with Grundfos GO Remote

- Go to **Settings > Level control > Application type**.
- Select the type.
  - **Empty**
  - **Fill**

#### Related information

[2.4 Application types](#)

[6.3 Startup wizard on the operating panel](#)

## 8.2 Setting the sensor type

### 8.2.1 Setting the sensor type with Grundfos GO Remote

- Go to **Settings > Level control > Sensor type**.
- Select the type.
  - **Analog sensors**
  - **Digital sensors**

### 8.2.2 Setting the sensor type with the operating panel

- Press and hold **OK** until **S-1** or **S-2** starts flashing.
- Select the sensor type using the **Up** and **Down** buttons.
  - **S-1: Analog sensors**
  - **S-2: Digital sensors.**
- Press **OK** to confirm the setting.
- Continuously press **OK** to confirm all other settings and to exit the setup.

## 8.3 Setting the start level

### 8.3.1 Setting the start level with Grundfos GO Remote


The settings apply to analog sensors. For digital sensors, the setting is automatically activated.

- Go to **Settings > Level control > Start level P1**.
- Set the start level for pump 1.
- Go to **Settings > Level control > Start level P2**.
- Set the start level for pump 2.

### 8.3.2 Setting the start level with the operating panel


The settings apply to analog sensors. For digital sensors, the setting is automatically activated.

- Press and hold **OK** until the display and dry running start flashing.
- Continuously press **OK** until the indicator light for the start level for pump 1 starts flashing.

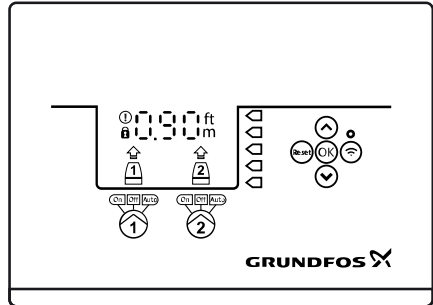

TM071336

- Set the start level for pump 1 by using the **Up** and **Down** buttons.
- Press **OK**.  
The indicator light for the start level for pump 2 starts flashing.

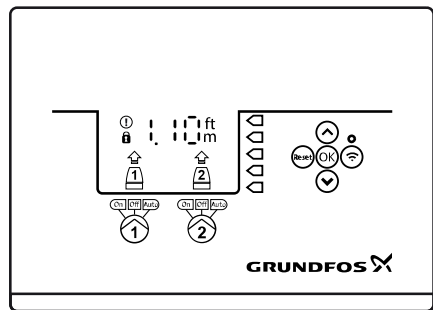

TM071337

- Set the start level for pump 2 by using the **Up** and **Down** buttons.
- Continuously press **OK** until the display stops flashing.  
The settings have now been stored.

## 8.4 Setting the stop level

### 8.4.1 Setting the stop level with Grundfos GO Remote

The settings apply to analog sensors. For digital sensors, the setting is automatically activated.

The stop level is the same for pump 1 and pump 2.

1. Go to **Settings > Level control > Stop level**
2. Set the stop level.



If you are using the same level for start and stop, remember to set a stop delay. This will prevent the pump from starting and stopping too frequently.

#### 8.4.2 Setting the stop level with the operating panel

The settings apply to analog sensors. For digital sensors, the setting is automatically activated.

The stop level is the same for pump 1 and pump 2.

1. Press and hold **OK** until the display starts flashing.  
The current stop level is indicated on the display.
2. Press **OK** once.
3. Set the stop level using the **Up** and **Down** buttons.
4. Continuously press **OK** to confirm all other settings and to exit the setup.



If you are using the same level for the start and stop level, remember to set a stop delay. This will prevent the pump from starting and stopping too frequently.

### 8.5 Setting the high level

#### 8.5.1 Setting the high level with Grundfos GO Remote

For analog sensors:

1. Go to **Settings > Level control > High level**.
2. Set the high level.

For digital sensors:

1. Go to **Settings > > LC 231 IO terminals**
2. Select which terminal to configure.

#### 8.5.2 Setting the high level with the operating panel

The settings apply to analog sensors

1. Press and hold **OK** until the display starts flashing.
2. Press **OK** four times. The current high level is indicated on the display.
3. Set the high level using the **Up** and **Down** button.

For digital sensors, enable or disable the setting.

1. Press **OK** once to complete the setting.

#### 8.6 After-run delay, high level

If the water level reaches the high level switch, due to either a defective analog or digital level switch, the pump is only controlled by the high level switch. To

avoid too many starts and stops, an after-run delay can be set which allows the pump to partly empty the pit. The after-run delay should be set so that the pump stops at the normal stop level to avoid dry running.



In case of an error, the product reports error 165 (**Signal fault**) or error 205 (**Level switch inconsistency**) on the display or in Grundfos GO Remote.

#### 8.6.1 Setting the after-run delay, high level

1. Go to **Settings > Level control > After-run delay, high level**.
2. Select **Enable** or **Disable**.
3. Set a delay time.

#### Related information

[10.22 Code 165 \(Signal fault\)](#)

[10.25 Code 205 \(Level switch inconsistency\)](#)

### 8.7 Stop delay

The stop delay is the time from when the stop level is reached until the pump stops. The stop delay prevents the pump from starting and stopping too frequently and reduces water hammer in long pipes.

#### 8.7.1 Setting the stop delay with Grundfos GO Remote

1. Select **Settings > Level control > Stop delay > State**
2. Select **Stop delay time**.
3. Set the **Stop delay time**.

### 8.8 Power-on delay

With this function it is possible to delay the startup of the pump after the power supply has been switched on. The purpose is to avoid disturbing the main power network which could happen if several pumps start up immediately when the power supply is switched on.

#### 8.8.1 Setting the power-on delay with Grundfos GO Remote

1. Go to **Settings > Power-on delay**.
2. Set the function to **Enabled**.
3. Set the time delay.

### 8.9 Dry-running protection

If the pump is running and the liquid level in the tank or pit becomes lower than the dry-running level, the dry-running protection will stop the pump to ensure that it is not damaged.

Dry-running protection is dependent on a feedback signal from a level sensor installed in the tank or pit.

### 8.9.1 Setting the dry-running level with Grundfos GO Remote

1. Go to **Settings > Level control > Dry-running level**.
2. Set the dry-running level.



The dry-running level must be set to a value which ensures that the pump is not damaged due to dry-running. The specific level depends on the installed pump type. See the installation and operating instructions for the product.

### 8.9.2 Setting the dry-running level with the operating panel

1. Press and hold **OK** until the display starts flashing.
2. Set the dry-running level using the **Up** or **Down** button.
3. Continuously press **OK** to confirm all other settings and to exit the setup.

### 8.10 Using the same level switch for the start and stop level

1. Set one digital input to **Start pump 1** or **Stop**. All other digital inputs must be disabled.
2. Set a stop delay.

This will prevent the pump from starting and stopping too frequently.

### 8.11 Multipump settings

The control unit enables start and stop of the two pumps alternately. The pump with the lowest number of running hours is always started first. The function ensures that the running hours of the pumps are the same.

It is possible to set a time delay before the next pump is started.

#### 8.11.1 Setting the multipump settings with Grundfos GO Remote

1. Go to **Settings > Multi pump settings**.
2. Set **Inter pump delay**.  
This is the starting delay between the pumps ensuring that they do not start at the same time.
3. Set **Max number of running pumps**.  
This is the maximum number of pumps that are allowed to run at the same time.
  - a. When the number is set to 1, it is possible to set the nominal pump current to 12 A (IEC) or 9.6 A (UL).
  - b. When the number is set to 2, it is possible to set the nominal pump current to 9 A (IEC) or 7.6 A (UL).

### 8.12 Antiseizing

The **Anti-seizing** function prevents a pump from choking or seizing up as a result of deposits buildup. **Anti-seizing** is used in pits that have had no inlet flow for a long period. The **Anti-seizing** function ensures that the pump starts as often as set in **Anti-seizing >> Interval**. The pump will operate for the number of seconds indicated by the user.

#### 8.12.1 Setting the "Anti-seizing" function with Grundfos GO Remote

1. Go to **Settings > Anti-seizing**.
2. Set the function to **Enabled**.
3. Set the time interval.
4. Set the operating time.

### 8.13 Signal-detection time

The signal-detection time is the minimum time a level has to be active before the control unit initiates an action, such as starting or stopping a pump.

#### 8.13.1 Setting the signal-detection time with Grundfos GO Remote

1. Go to **Settings > Level control > Signal detection time**.
2. Set the signal-detection time.

### 8.14 Setting the maximum number of restarts with Grundfos GO Remote

If the pump is seized up as a result of deposits buildup, it will be stopped automatically due to overheating, provided that the motor protection has been set. When the motor has cooled down, the control unit will unsuccessfully try to restart the pump and this scenario will be repeated.

In order to prevent this, it is possible to set a maximum number of restart attempts within a set interval.

1. Go to **Settings > Max number of restarts**.
2. Enable the function.
3. Set the interval within which the allowed number of restarts are to be counted.
4. Set the maximum number of pump restarts which are allowed during the set interval.

#### Related information

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

[8.17.1 Overheat protection](#)

[8.17.2 Overload protection](#)

[10.3 Code 4 \(Too many motor restarts\)](#)

## 8.15 Setting the service interval with Grundfos GO Remote

You can set a time in Grundfos GO Remote in order to get a reminder that the pump needs service when the time comes.

1. Go to **Settings > Service > State**
2. Select **Enable** and press **OK**.
3. Select the pump.
4. Enter the number of hours until next service and press **OK**.

## 8.16 Operating the product

### 8.16.1 Automatic operation

In automatic operating mode, the control unit starts and stops the pump based on the signals it receives from the connected level sensors and the corresponding level settings within the control unit.

#### Related information

[2.4 Application types](#)

### 8.16.2 Manual operation

#### 8.16.2.1 Starting and stopping the pump manually with Grundfos GO Remote

1. Go to **Settings > Control, pump 1** or **Control, pump 2**.
2. Start the pump by selecting **On** and pressing **OK**.
3. Stop the pump by selecting **Off** and pressing **OK**.

#### Related information

[8.16.2.3 Choosing what the pump must do after manual start](#)

#### 8.16.2.2 Starting and stopping the pump manually with the operating panel

1. To start a pump manually, press and hold the **Pump** button until the pump starts.  
The **On** indicator light is lit when the pump is operating in manual mode.
2. Stop the pump by pressing the **Pump** button.  
The **Off** indicator light is lit when the pump is stopped.

#### Related information

[8.16.2.3 Choosing what the pump must do after manual start](#)

#### 8.16.2.3 Choosing what the pump must do after manual start

The following can be configured:

- **Automatic return**

Here you select if the pump must automatically return to a defined operating mode when the manual start ends.

- **Return to**  
Here you select whether the pump must return to automatic operating mode or stop when the manual start ends and **Automatic return** has been enabled.
  - **Forced start time**  
Here you set the time period in which the pump must run in manual operating mode.
1. Go to **Settings > Manual start**.
  2. Select **Automatic return** and choose one of the following options:
    - **Disabled**
    - **Enabled**.
  3. Go one step back in the menu and select **Return to**.
  4. Choose one of the following options:
    - **Auto**
    - **Off**.
  5. Go one step back in the menu and select **Forced start time**.
  6. Set the time period in which the pump must run in manual operating mode.

#### Related information

[8.16.2.2 Starting and stopping the pump manually with the operating panel](#)

[8.16.2.1 Starting and stopping the pump manually with Grundfos GO Remote](#)

## 8.17 Motor protection



Make sure that all settings are entered according to the pump and system requirements to avoid malfunction.

### 8.17.1 Overheat protection

The control unit offers thermal protection for the connected motors. Two types of thermal-protection sensor can be connected to the control unit: a PTC sensor (analog) and a thermal switch (digital).

Under normal running conditions, the sensor will act as a short circuit, but when its temperature limit is reached, it will open and tell the control unit that the temperature is too high, and the pump is stopped. When the temperature has dropped to the sensor-trigger level, the pump will return to normal running conditions. It will not be possible to start the pump manually as long as the temperature is too high.

## Related information

[8.14 Setting the maximum number of restarts with Grundfos GO Remote](#)

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

[10.13 Code 69 \(Winding temperature too high\)](#)

### 8.17.2 Overload protection

The pump is protected by internal software-based motor protection.

## Related information

[8.14 Setting the maximum number of restarts with Grundfos GO Remote](#)

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

[10.9 Code 48 \(Motor is overloaded\)](#)

### 8.17.3 Moisture protection

When a moisture sensor is installed in series with the temperature sensor, the control unit needs to know how to determine whether there is a high temperature or moisture in the pump. If the temperature is too high, normally the temperature sensor will go back to its normal stage when the temperature has dropped to its trigger level. If there is moisture in the pump, then the moisture sensor will keep the series connection open until the pump is opened and serviced.

To determine which sensor has been active, a **cool down time** must be entered. This is the time that will normally pass until the temperature has dropped enough for the temperature sensor to return to its normal stage. If the **cool down time** is exceeded, the control unit will assume that there is moisture in the pump, and it will send a moisture alarm.

## Related information

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

### 8.17.4 Setting the motor protection with Grundfos GO Remote

You can set the current, temperature and moisture protection via a setup wizard.

- Go to **Settings > Motor protection pump 1** or **Motor protection pump 2**.
- Follow the on-screen wizard to set the following:
  - Nominal pump current**
  - Trip IEC class**
  - Trip class P delay**
  - Overheat protection.**

## Related information

[5.3 Connecting the pump supply and power supply](#)

[8.14 Setting the maximum number of restarts with Grundfos GO Remote](#)

[8.17.1 Overheat protection](#)

[8.17.2 Overload protection](#)

[8.17.3 Moisture protection](#)

[8.17.5 Trip classes](#)

[10.10 Code 51 \(Blocked\)](#)

[10.26 Code 220 \(Contactor wear out\)](#)

### 8.17.5 Trip classes

LC 23X offers two ways of motor protection:

- an adjustable trip class (P)
- trip classes according to the IEC standard that defines trip classes (5, 10, 20 and 30).

## Related information

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

## 8.18 Alarm reset

### 8.18.1 Resetting alarms and warnings manually with Grundfos GO

- Go to **Alarms and warnings**.
- Press **Reset alarm**.  
All current alarms and warnings have been reset. However, if the fault causing the alarm or warning has not been removed, the alarm or warning will appear again.
- If you want to delete all alarms and warnings from the history log, press **Show log > Reset alarm and warning logs**.

### 8.18.2 Setting the automatic alarm reset with Grundfos GO Remote

- Go to **Settings > Automatic alarm reset**.
- Select one of the following:

<b>No automatic reset</b>	The control unit does not reset any alarm or warning. You must do it manually.
<b>All except pump critical</b>	The control unit resets alarms and warnings unless the related fault can damage the pump.
<b>All alarms</b>	The control unit resets alarms and warnings, regardless of the fault.



### 8.18.3 Resetting alarms and warnings on the operating panel

You can manually reset alarms and warnings on the operating panel. However, if the fault causing the alarm or warning has not been removed, the alarm or warning will appear again.

1. Press **Reset** on the operating panel to reset the alarm or warning.

### 8.19 Setting the buzzer with Grundfos GO Remote

The internal buzzer is used to give an acoustic sound if there is a warning or an alarm.

1. Go to **Settings > Buzzer settings**.
2. Select when the buzzer is to be activated:
  - **All alarms**
  - **All alarms and warnings**.

### 8.20 Setting units for Grundfos GO Remote

Changing units as described here will only change the units shown in Grundfos GO Remote. It will not affect the units shown on the operating panel of products connected to Grundfos GO Remote.

1. Press the **Menu** button in the upper left corner of Grundfos GO Remote.



2. Go to **General > Settings > Products > Units**.
3. Select **US** or **Grundfos default units**.

### 8.21 Setting units for the operating panel with Grundfos GO Remote

Changing units as described below changes the units shown in the operating panel of the product connected to Grundfos GO Remote. It does not affect the units shown in Grundfos GO Remote.

1. Go to **Settings > Display units**.
  - **SI Units**
  - **US Units**.

### 8.22 GENibus

GENibus, the Grundfos Electronics Network Intercommunications bus, is a fieldbus developed by Grundfos to meet the need for data transfer in all typical Grundfos motor or pump applications. Grundfos devices with GENibus can be wired together in networks and integrated in automation systems. Each device on the network must have a unique GENibus address. GENibus is based on the RS485 hardware standard and typically operates at a baud rate of 9600 bits/s.

#### 8.22.1 Setting the GENibus address with Grundfos GO Remote

1. Go to **Settings > GENI bus address**.
2. Set the GENibus address.

The GENibus address is a unique identifier for the product on the network.

### 8.23 Security

#### 8.23.1 Locking the operating panel

The operating panel can only be locked with Grundfos GO Remote.

1. Go to **Settings > Security > Lock Display**.
2. Enable the setting and press **Done**.
3. Select if you want to restrict access to **Settings only** or **Settings and operation**.
4. Press **Done**.

The lock symbol on the operating panel is now lit.

#### 8.23.2 Unlocking the operating panel

The operating panel can only be unlocked with Grundfos GO Remote.

1. Go to **Settings > Security > Lock Display**.
2. Disable the setting and press **Done**.

The lock symbol on the operating panel is switched off.

#### 8.23.3 Locking Grundfos GO Remote

1. Go to **Settings > Security > Lock GO Remote**.

2. Enable the setting and press **Done**.
3. Enter a four digit PIN code and press **CONFIRM**.

A lock symbol indicates which menus are locked. To view or change settings, you must enter the PIN code.

#### **8.23.4 Unlocking Grundfos GO Remote**

1. Go to **Settings > Security**.
2. Enter the four digit PIN code.
3. Select **Lock GO Remote**.
4. Disable the setting and press **Done**.

All menus in Grundfos GO Remote are unlocked.

### **8.24 Starting the startup wizard with the operating panel**

- Press and hold the **OK** button for 5 seconds until **S-1** or **S-2** starts flashing.

#### **Related information**

[6.3 Startup wizard on the operating panel](#)

## 9. Servicing the product

### WARNING

#### Electric shock

Death or serious personal injury



- Switch off the incoming power supply before you start any work on the product or connected pumps.
- Make sure that the power supply cannot be switched on accidentally.

### 9.1 Updating the product software

New features and functions can be made available during the product's life cycle.

1. Contact Grundfos to get your product software updated.

### 9.2 Replacing the battery

### CAUTION

#### Fire and chemical leakage

Minor or moderate personal injury



- Risk of explosion if the battery is replaced by an incorrect type.

### DANGER

#### Intoxication or risk of chemical burn

Death or serious personal injury



- The battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body. In such an event, seek medical attention immediately.

The replacement or servicing of batteries must be carried out by a qualified person.



The battery contained within this product, whether new or used, is hazardous and is to be kept away from children.

To replace the battery, do the following:

1. Remove the front cover.
2. Gently grab around the battery without touching it too much.
3. Push the battery to the side to release it.
4. Pull the battery up.
5. Insert a new battery of the correct type.

### Related information

[11.3 Environmental data](#)

## 9.3 Replacing the CIM module

### WARNING

#### Electric shock

Death or serious personal injury



- Switch off the power supply before making any electrical connections.
- Make sure that the power supply cannot be switched on accidentally.

1. Switch off the power supply to the product and other components with external supply.
2. Write down the terminal connection of each wire to ensure correct re-connection.
3. Disconnect all wires connected to the CIM module.
4. Remove the screws that holds the module.
5. Remove the module from the control unit.
6. Fit the new module.
7. Connect all wires.

## 10. Fault finding the product

Fault finding and fault correction must be carried out by qualified persons.

### WARNING

#### Electric shock

Death or serious personal injury



- Switch off the power supply before you start any work on the product.
- Make sure that the power supply cannot be switched on accidentally.

### 10.1 Overview of alarm and warning codes

Code number	Description
Code 2	The power phase is missing.
Code 4	Too many motor restarts.
Code 9	The power-phase sequence is wrong.
Code 12	Service is needed.
Code 22	Moisture in pump motor.
Code 25	Wrong configuration.
Code 26	Contactors is shorted.
Code 48	The motor is overloaded.
Code 51	The pump is blocked.
Code 56	Underload, current sensor measures a value too low.
Code 57	Missing water in the application.
Code 69	The winding temperature is too high.
Code 72	Internal fault.
Code 76	Internal fault.
Code 84	The memory-storage media is faulty.
Code 85	Internal fault.
Code 117	The door is opened.
Code 157	Real-time clock monitoring.
Code 159	Communication error, CIM xxx.
Code 163	Motor-drive protection function, measurement fault.
Code 165	Signal fault.
Code 181	Signal fault, PTC input.
Code 191	High water level.
Code 205	Level-switch inconsistency.
Code 220	Contactors wear-out.
Code 229	Water on the floor.

## 10.2 Code 2 (Power phase missing)

- Alarm code 2 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Power phase missing** is displayed in Grundfos GO Remote.

Cause	Remedy
The product is configured for 2 or 3 phases but only 1 phase is connected.	<ul style="list-style-type: none"> <li>• Make sure that the <b>Mains Power connection</b> setting is correct according to the number of phases connected (1, 2 or 3 phases).</li> </ul>
One of the power supply phases is not connected.	<ul style="list-style-type: none"> <li>• Connect the phase.</li> </ul>
The fuse is blown somewhere on the incoming power line.	<ul style="list-style-type: none"> <li>• Replace the fuse.</li> </ul>

### Related information

[5.3 Connecting the pump supply and power supply](#)

## 10.3 Code 4 (Too many motor restarts)

- Alarm code 4 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Too many motor restarts** is displayed in Grundfos GO Remote.

Cause	Remedy
The pump has been blocked or partly blocked causing overload in the motor.	<ul style="list-style-type: none"> <li>• Remove the blockage from the pump.</li> </ul>

### Related information

[8.14 Setting the maximum number of restarts with Grundfos GO Remote](#)

## 10.4 Code 9 (Power phase sequence wrong)

- Alarm code 9 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Power phase sequence wrong** is displayed in Grundfos GO Remote.

Cause	Remedy
The power supply phase is set incorrectly.	<ul style="list-style-type: none"> <li>• Interchange two phases.</li> </ul>

### Related information

[5.3 Connecting the pump supply and power supply](#)

### 10.5 Code 12 (Service needed)

- Warning code 12 is shown on the display if you press the **Up** or **Down** button.
- The warning symbol on the display turns yellow and the pump's operating mode is unchanged.
- Warning code **Service needed** is displayed in Grundfos GO Remote.

Cause	Remedy
The pump requires service based on time to next service countdown.	<ul style="list-style-type: none"> <li>• Contact Grundfos or an authorised service workshop.</li> <li>• In order for the product to determine the service time, you must have enabled the service countdown with Grundfos GO Remote: <b>Settings &gt; Service</b></li> </ul>

### 10.6 Code 22 (Moisture in motor of pump)

- Alarm code 22 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Moisture in motor of pump** is displayed in Grundfos GO Remote.

Cause	Remedy
Moisture is detected in the motor of the pump.	<ul style="list-style-type: none"> <li>• Service is needed on the pump. Contact Grundfos.</li> </ul>

### 10.7 Code 25 (Wrong configuration)

- Alarm code 25 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Wrong configuration** is displayed in Grundfos GO Remote.

Cause	Remedy
The level control is not configured correctly.	<ul style="list-style-type: none"> <li>• Check and adjust the level control configuration with Grundfos GO Remote.</li> </ul>
The IO terminal is not configured correctly.	<ul style="list-style-type: none"> <li>• Select which IO terminal to change in Grundfos GO Remote and adjust the configuration.</li> </ul>

#### Related information

[6.6 Configuring the IO terminals using Grundfos GO Remote](#)

### 10.8 Code 26 (Contactor shorted)

- Alarm code 26 is shown on the display.
- The alarm symbol on the display turns red but the pump's operating mode is unchanged.
- Alarm code **Contactor shorted** is displayed in Grundfos GO Remote.

Cause	Remedy
The contactor melts due to motor overload and the pump is unable to stop.	<ul style="list-style-type: none"> <li>• Replace the control unit.</li> </ul>

### 10.9 Code 48 (Motor is overloaded)

- Alarm code 48 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Motor is overloaded** is displayed in Grundfos GO Remote.

Cause	Remedy
The pump is clogged. The blockage causes the motor current to rise, which could damage the pump.	<ul style="list-style-type: none"> <li>• Remove the blockage.</li> <li>• Check the pit conditions to ensure blockage is not possible again.</li> </ul>

#### Related information

[8.17.2 Overload protection](#)

### 10.10 Code 51 (Blocked)

- Alarm code 51 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Blocked** is displayed in Grundfos GO Remote.

Cause	Remedy
The pump is blocked. The pump cannot rotate due to a blockage.	<ul style="list-style-type: none"> <li>• Dismantle the pump by removing the pump head, and remove any blockage or impurities preventing the pump from rotating.</li> <li>• Check the water quality to eliminate the risk of lime precipitation. Before dismantling the pump, drain the system or close the isolating valves on either side of the pump. The pumped liquid may be scalding hot and under high pressure.</li> </ul>

#### Related information

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

### 10.11 Code 56 (Underload, current sensor measures a value too low)

- Alarm code 56 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Underload, current sensor measures a value too low** is displayed in Grundfos GO Remote.

Cause	Remedy
The measured current is too low.	<ul style="list-style-type: none"> <li>• Make sure that the nominal pump current is configured correctly in Grundfos GO Remote.</li> <li>• Make sure that the pump is connected to the pump terminals on the product.</li> <li>• Make sure that the pump cable is not damaged.</li> <li>• Make sure that the pump rating is within the specified current or power rating of the product.</li> </ul>
Some smaller pumps have PTC/Klixon sensors integrated into the motor windings, but the sensors have no connection out of the pump. In case of overheating, the sensors stop the pump, and no current is drawn.	<ul style="list-style-type: none"> <li>• Make sure that the pumps get sufficient cooling and are not blocked.</li> </ul>

### 10.12 Code 57 (Missing water in the application)

- Alarm code 57 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Dry run** is displayed in Grundfos GO Remote.

Cause	Remedy
Low water level in the pit and the pump stops due to the dry-running function.	<ul style="list-style-type: none"> <li>• Check and configure the sensor stop level.</li> </ul>



### 10.13 Code 69 (Winding temperature too high)

- Alarm code 69 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Winding temperature too high** is displayed in Grundfos GO Remote.

Cause	Remedy
The pump is clogged, causing the pump to use more current and thereby overheat.	<ul style="list-style-type: none"> <li>• Remove the blockage.</li> </ul>
The pump has run for too long.	<ul style="list-style-type: none"> <li>• Allow the pump to cool down.</li> <li>• Adjust the distance between start and stop levels.</li> </ul>
PTC input wiring and/or sensors are incorrect.	<ul style="list-style-type: none"> <li>• Make sure that the two PTC wires from the pump are connected correctly to the terminals on the product.</li> <li>• Make sure that the third PTC wire is left unconnected if present.</li> <li>• Make sure that the PTC wires are undamaged.</li> <li>• Make sure that the PTC sensors within the pumps are undamaged.</li> <li>• Perform a test by disconnecting the PTC wires from the pump and shorting PTC1 terminal A and B and also PTC2 terminal A and B, and verify that the error is cleared.</li> <li>• Replace the product due to the damaged PTC circuit. Contact Grundfos.</li> </ul>

#### Related information

[8.17.1 Overheat protection](#)

### 10.14 Code 72 (Internal fault)

- Alarm code 72 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Internal hardware fault** is displayed in Grundfos GO Remote.

Cause	Remedy
Fault in internal hardware.	<ul style="list-style-type: none"> <li>• Contact Grundfos or an authorised service workshop.</li> </ul>

**10.15 Code 76 (Internal fault)**

- Alarm code 76 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Drive unit communication fault** is displayed in Grundfos GO Remote.

Cause	Remedy
Internal communication fault.	<ul style="list-style-type: none"> <li>• Contact Grundfos or an authorised service workshop.</li> </ul>

**10.16 Code 84 (Memory storage media faulty)**

- Warning code 84 is shown on the display if you press the **Up** or **Down** button.
- The warning symbol on the display turns yellow and the pump's operating mode is unchanged.
- Warning code **Memory storage media faulty** is displayed in Grundfos GO Remote.

Cause	Remedy
An error in the internal memory has been detected.	<ul style="list-style-type: none"> <li>• Replace the control unit.</li> <li>• Contact Grundfos or an authorised service workshop.</li> </ul>

**10.17 Code 85 (Internal fault)**

- Alarm code 85 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Internal fault** is displayed in Grundfos GO Remote.

Cause	Remedy
Internal memory fault.	<ul style="list-style-type: none"> <li>• Contact Grundfos or an authorised service workshop.</li> </ul>

### 10.18 Code 117 (Door opened)

- Warning code 117 is shown on the display if you press the **Up** or **Down** button.
- The warning symbol on the display turns yellow and the operating mode of the pump is unchanged.
- Warning code **Door opened** is displayed in Grundfos GO Remote.

Cause	Remedy
The door to the control-unit room has been opened.	<ul style="list-style-type: none"> <li>• Check the room with the control unit.</li> </ul>

### 10.19 Code 157 (Real-time clock monitoring)

- Warning code 157 is shown on the display if you press the **Up** or **Down** button.
- The warning symbol on the display turns yellow, and the pump's operating mode is unchanged.
- Warning code **Real-time clock out of order** is displayed in Grundfos GO Remote.

Cause	Remedy
The battery for the real time clock is missing or worn out so the product is unable to maintain time and date.	<ul style="list-style-type: none"> <li>• Replace the battery with a new one.</li> </ul>

### 10.20 Code 159 (Communication error CIMxxx)

- Warning code 159 is shown on the display if you press the **Up** or **Down** button.
- The warning symbol on the display turns yellow and the pump's operating mode is unchanged.
- Warning code **Communication error CIMxxx** is displayed in Grundfos GO Remote.
- The CIM module is unable to communicate with the product.

Cause	Remedy
The CIM module is installed incorrectly.	<ul style="list-style-type: none"> <li>• Ensure that the module, including cables, is fitted correctly.</li> </ul>
The CIM module is defective.	<ul style="list-style-type: none"> <li>• Contact Grundfos.</li> </ul>

#### Related information

[4.5 Installing a communication interface module](#)

### 10.21 Code 163 (Motor-drive protection function measurement fault)

- Alarm code 163 is shown on the display.
- The alarm symbol on the display turns red, but the pump's operating mode is unchanged.
- Alarm code **Drive unit configuration fault** is displayed in Grundfos GO Remote.

Grundfos GO Remote menu	Input	Output
<b>3 Phase</b>	3 phases without neutral (L3 connected to N)	3-phase pumps connected to T1-T2-T3.
<b>3 Phase with neutral</b>	3 phases with neutral	3-phase pumps connected to T1-T2-T3.
<b>2 phase L1-L2-N</b>	2 phases with neutral	2-phase pumps: P1 connected to T1-N. P2 connected to T2-N.
<b>1 Phase L1-N</b>	1 phase with neutral	1-phase pumps: P1 connected to T1-N. P2 connected to T1-N.

Cause	Remedy
The measured current is above the limit.	<ul style="list-style-type: none"> <li>• Make sure that the <b>Mains Power connection</b> setting in Grundfos GO Remote is configured correctly according to input connections.</li> <li>• Make sure that the <b>Mains Power connection</b> setting in Grundfos GO Remote is configured correctly according to pump connections.</li> <li>• Make sure that the pump is connected to the correct contactor terminals (T1, T2, T3) depending on the configuration in <b>Mains Power connection</b>.</li> <li>• Remove load from non-configured contactor terminals (T2, T3) depending on the configuration in <b>Mains Power connection</b>.</li> </ul>

## 10.22 Code 165 (Signal fault)

- Alarm code 165 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Signal fault** is displayed in Grundfos GO Remote.

Cause	Remedy
The signal from the sensor is out of the configured range.	<ul style="list-style-type: none"> <li>• Go to <b>Settings &gt; Level control</b> in Grundfos GO Remote and ensure that the configured range corresponds to the physical application type.</li> <li>• Change the sensor, if needed.</li> </ul>

### Related information

[8.6.1 Setting the after-run delay, high level](#)

## 10.23 Code 181 (Signal fault, PTC input)

- Alarm code 181 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Signal fault, PTC input** is displayed in Grundfos GO Remote.

Cause	Remedy
There is a signal fault in the PTC input.	<ul style="list-style-type: none"> <li>• Make sure that the two PTC wires from the pump are connected correctly to the terminals on the product.</li> <li>• Make sure that the third PTC wire is left unconnected, if present.</li> <li>• Make sure that the PTC wires are undamaged.</li> <li>• Make sure that the PTC sensors within the pumps are undamaged.</li> <li>• Perform a test by disconnecting the PTC wires from the pump and shorting PTC1 terminal A and B and also PTC2 terminal A and B, and verify that the error is cleared.</li> <li>• Replace the product due to damaged PTC circuit. Contact Grundfos.</li> </ul>

### Related information

[5.3 Connecting the pump supply and power supply](#)

### 10.24 Code 191 (High water level)

- Alarm code 191 is shown on the display.
- The alarm symbol on the display turns red, but the pump's operating mode is unchanged.
- Alarm code **High water level** is displayed in Grundfos GO Remote.

Cause	Remedy
The defined start level did not start the pump.	<ul style="list-style-type: none"> <li>• Check and configure the sensor start level.</li> </ul>
The pump is not big enough to remove the water.	<ul style="list-style-type: none"> <li>• Contact Grundfos or an authorised service workshop.</li> </ul>
The level sensor is defective and not reacting on level changes.	<ul style="list-style-type: none"> <li>• Check the functionality of the level sensor.</li> </ul>

#### Related information

[6.6 Configuring the IO terminals using Grundfos GO Remote](#)

### 10.25 Code 205 (Level switch inconsistency)

- Alarm code 205 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- Alarm code **Level switch inconsistency** is displayed in Grundfos GO Remote.

Cause	Remedy
A float switch could be defective or stuck.	<ul style="list-style-type: none"> <li>• Check the functionality of each float switch.</li> </ul>

#### Related information

[6.6 Configuring the IO terminals using Grundfos GO Remote](#)

[8.6.1 Setting the after-run delay, high level](#)

## 10.26 Code 220 (Contactor wear out)

- Warning code 220 is shown on the display if you press the **Up** or **Down** button.
- Alarm code 220 is shown on the display.
- The alarm symbol on the display turns red and the pump stops.
- The warning symbol on the display turns yellow and the pump's operating mode is unchanged.
- Alarm code or warning code **Contactor wear out** is displayed in Grundfos GO Remote.

Cause	Remedy
Warning: The contactor is almost worn out. The controller is approaching end-of-life and must be replaced soon.	<ul style="list-style-type: none"> <li>• Order a new LC 23X to avoid downtime. Contact Grundfos.</li> </ul>
Alarm: The contactor is worn out and the pump cannot start. The contactor has reached its maximum number of operating cycles and is worn out.	<ul style="list-style-type: none"> <li>• Replace LC 23X. Contact Grundfos.</li> </ul>

### Related information

[8.17.4 Setting the motor protection with Grundfos GO Remote](#)

## 10.27 Code 229 (Water on floor)

- Warning code 229 is shown on the display if you press the **Up** or **Down** button.
- The warning symbol on the display turns yellow and the pump's operating mode is unchanged.
- Warning code **Water on floor** is displayed in Grundfos GO Remote.

Cause	Remedy
The sensor detects water on the floor.	<ul style="list-style-type: none"> <li>• Check for water leakage.</li> </ul>

## 11. Technical data

### 11.1 Electrical data

#### Voltage

- 1 x 110-240 V - 10 %/+ 10 %, PE
- 3 x 200-460 V - 10 %/+ 10 %, PE.

#### Frequency

50/60 Hz.

#### Maximum starting current

IEC: 78 A.

UL: 68 A.

#### Minimum power factor

0.86.

#### Digital input

IEC: solid or stranded 0.5 - 2.5 mm<sup>2</sup>, flexible 0.25 - 1.5 mm<sup>2</sup>.

UL: solid or stranded AWG 28-12.

Stripping length: 5-6 mm (0.19"-0.24").

Digital input mode	Low logic level below 1.8 V. High logic level higher than 2.7 V.
--------------------	---

#### DIO terminals

Digital input mode	Low logic level below 1.8 V. High logic level higher than 2.7 V.
--------------------	---

Digital output mode	Open collector. Current sink capability: maximum 75 mA, no sourcing. Overcurrent protected.
---------------------	---

#### Power supplies, +24 V

Output voltage: 24 VDC - 10 %/+ 10 %.

Maximum 200 mA on each terminal.

#### Supply fuse

Maximum 35 A.

#### Measurement tolerances

24 V external - 10 %/+ 10 %.

Current measurement: - 5 %/+ 5 %.

Power measurement: - 10 %/+ 10 %.

### 11.2 Mechanical data

#### Maximum number of pump starts and stops per hour

250.

#### Cable diameters

Mains cable	10-16 mm (0.4" - 0.6")
-------------	------------------------

Pump cable	10-16 mm (0.4" - 0.6") 16-21 mm (0.6" - 0.83"), with optional metal cable gland
Sensor cable	5-8 mm (0.19" - 0.3")

#### Mains input terminal

IEC stranded or solid 2.5 to 16 mm<sup>2</sup>.

UL stranded or solid AWG 20 to 6.

Screw torque: 1.2 Nm.

Stripping length: 12 mm (0.47").

#### Pump output terminal

Current: See nameplate.

IEC stranded 0.75 to 2.5 mm<sup>2</sup>.

IEC solid 1.5 to 4.0 mm<sup>2</sup>.

UL stranded or solid AWG 18 to 12.

Screw torque: 1.2 Nm.

#### Alarm relay terminals

250 VAC nominal and 24 VDC nominal.

Nominal current 10 mA to 2 A AC/DC.

Action type 1.C.

D300 pilot duty (auxiliary relay).

UL: solid AWG 28-12, stranded AWG 30-12.

IEC: solid or stranded 0.25 - 2.5 mm<sup>2</sup>.

Stripping length: 7-8 mm (0.28"-0.31").

Screw torque: 0.5 Nm.

#### PTC

IEC: solid or stranded 0.25 - 2.5 mm<sup>2</sup>.

UL: solid AWG 28-12, stranded AWG 30-12.

Stripping length 7-8 mm (0.28" - 0.31").

Screw torque: 0.5 Nm.

Trip resistance: greater than 2.2 kΩ - 5 %/+ 5 %.

Automatic reset resistance: less than 1 kΩ - 5 %/+ 5 %.

#### Pt100 or Pt1000 inputs (Pt)

Use Pt100 for short wires.

Use Pt1000 for long wires.

Solid or stranded wire: AWG 28-12 or maximum 2.5 mm<sup>2</sup>.

IEC: solid or stranded 0.5 - 2.5 mm<sup>2</sup>, flexible 0.25 - 1.5 mm<sup>2</sup>.

UL: solid or stranded AWG 28-12.

Stripping length: 5-6 mm (0.19"-0.24").

#### Altitude

Maximum 2000 m (6562 ft).

#### Related information

[5.2 Protection of controller and supply cables](#)



## 11.3 Environmental data

### Enclosure class

IP54 / NEMA 3R.

### Pollution degree

Category 3.

### Motor protection

Software class B.

Action type 2.B.

### Battery

Size BR2032.

### Related information

[9.2 Replacing the battery](#)

## 11.4 Temperature

### Operating temperature and current

Model	Maximum current and temperature combination
IEC: 99369650 LC 231 2x 1-9 DOL PI	9 A <sup>2)</sup> and 40 °C (104 °F)
UL: 99369652 LC 231 2x 1-7.6 DOL PI	7.6 A <sup>3)</sup> and 40 °C (104 °F)

2) When the maximum number of running pumps is set to 1, it is possible to set the nominal pump current to 12 A.

3) When the maximum number of running pumps is set to 1, it is possible to set the nominal pump current to 9.6 A.

### Storage temperature

Min. storage temperature	-30 °C (-22 °F)
Max. storage temperature	60 °C (140 °F)

### Ambient temperature

Min. ambient temperature	-25 °C (-4 °F)
Max. ambient temperature	40 °C (104 °F)

## 12. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way.

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.
3. Dispose of the waste battery through the national collective schemes. If in doubt, contact your local Grundfos company.



The crossed-out wheellie bin symbol on a product means that it must be disposed of separately from household waste. When a product marked with this symbol reaches its end of life, take it to a collection point designated by the local waste disposal authorities.

The separate collection and recycling of such products will help protect the environment and human health.

See also end-of-life information at [www.grundfos.com/product-recycling](http://www.grundfos.com/product-recycling).

## 13. Document quality feedback

To provide feedback about this document, scan the QR code using your phone's camera or a QR code app.



[Click here to submit your feedback](#)

FEEDBACK99480674

**Argentina**

Bombas GRUNDFOS de Argentina S.A.  
Ruta Panamericana km. 37.500 Industrias  
1619 - Garin Pcia. de B.A.  
Tel.: +54-3327 414 444  
Fax: +54-3327 45 3190

**Australia**

GRUNDFOS Pumps Pty. Ltd.  
P.O. Box 2040  
Regency Park  
South Australia 5942  
Tel.: +61-8-8461-4611  
Fax: +61-8-8340-0155

**Austria**

GRUNDFOS Pumpen Vertrieb  
Ges.m.b.H.  
Grundfosstraße 2  
A-5082 Grödig/Salzburg  
Tel.: +43-6246-883-0  
Fax: +43-6246-883-30

**Belgium**

N.V. GRUNDFOS Bellux S.A.  
Boomssesteenweg 81-83  
B-2630 Aartselaar  
Tel.: +32-3-870 7300  
Fax: +32-3-870 7301

**Bosnia and Herzegovina**

GRUNDFOS Sarajevo  
Zmajia od Bosne 7-7A  
BiH-71000 Sarajevo  
Tel.: +387 33 592 480  
Fax: +387 33 590 465  
www.ba.grundfos.com  
E-mail: grundfos@bih.net.ba

**Brazil**

BOMBAS GRUNDFOS DO BRASIL  
Av. Humberto de Alencar Castelo  
Branco, 630  
CEP 09850 - 300  
São Bernardo do Campo - SP  
Tel.: +55-11 4393 5533  
Fax: +55-11 4343 5015

**Bulgaria**

Grundfos Bulgaria EOOD  
Slatina District  
Iztocna Tangenta street no. 100  
BG - 1592 Sofia  
Tel.: +359 2 49 22 200  
Fax: +359 2 49 22 201  
E-mail: bulgaria@grundfos.bg

**Canada**

GRUNDFOS Canada inc.  
2941 Brighton Road  
Oakville, Ontario  
L6H 6C9  
Tel.: +1-905 829 9533  
Fax: +1-905 829 9512

**China**

GRUNDFOS Pumps (Shanghai) Co. Ltd.  
10F The Hub, No. 33 Suhong Road  
Minhang District  
Shanghai 201106 PRC  
Tel.: +86 21 612 252 22  
Fax: +86 21 612 253 33

**Colombia**

GRUNDFOS Colombia S.A.S.  
Km 1.5 vía Siberia-Cota Conj. Potrero  
Chico,  
Parque Empresarial Arcos de Cota Bo. 1A.  
Cota, Cundinamarca  
Tel.: +57(1)-2913444  
Fax: +57(1)-8764586

**Croatia**

GRUNDFOS CROATIA d.o.o.  
Buzinski prilaz 38, Buzin  
HR-10010 Zagreb  
Tel.: +385 1 6595 400  
Fax: +385 1 6595 499  
www.hr.grundfos.com

**Czech Republic**

GRUNDFOS Sales Czechia and Slovakia  
s.r.o.  
Čajkovského 21  
779 00 Olomouc  
Tel.: +420-585-716 111

**Denmark**

GRUNDFOS DK A/S  
Martin Bachs Vej 3  
DK-8850 Bjerringbro  
Tel.: +45-87 50 50 50  
Fax: +45-87 50 51 51  
E-mail: info\_GDK@grundfos.com  
www.grundfos.com/DK

**Estonia**

GRUNDFOS Pumps Eesti OÜ  
Peterburi tee 92G  
11415 Tallinn  
Tel.: + 372 606 1690  
Fax: + 372 606 1691

**Finland**

OY GRUNDFOS Pumput AB  
Trukkikujua 1  
FI-01360 Vantaa  
Tel.: +358-(0) 207 889 500

**France**

Pompes GRUNDFOS Distribution S.A.  
Parc d'Activités de Chesnes  
57, rue de Malacombe  
F-38290 St. Quentin Fallavier (Lyon)  
Tel.: +33-4 74 82 15 15  
Fax: +33-4 74 94 10 51

**Germany**

GRUNDFOS GMBH  
Schlüterstr. 33  
40699 Erkrath  
Tel.: +49-(0) 211 929 69-0  
Fax: +49-(0) 211 929 69-3799  
E-mail: infoservice@grundfos.de  
Service in Deutschland:  
kundendienst@grundfos.de

**Greece**

GRUNDFOS Hellas A.E.B.E.  
20th km. Athinon-Markopoulou Av.  
P.O. Box 71  
GR-19002 Peania  
Tel.: +0030-210-66 83 400  
Fax: +0030-210-66 46 273

**Hong Kong**

GRUNDFOS Pumps (Hong Kong) Ltd.  
Unit 1, Ground floor, Siu Wai industrial  
Centre  
29-33 Wing Hong Street & 68 King Lam  
Street, Cheung Sha Wan  
Kowloon  
Tel.: +852-27861706 / 27861741  
Fax: +852-27858664

**Hungary**

GRUNDFOS South East Europe Kft.  
Tópark u. 8  
H-2045 Törökbálint  
Tel.: +36-23 511 110  
Fax: +36-23 511 111

**India**

GRUNDFOS Pumps India Private  
Limited  
118 Old Mahabalipuram Road  
Thoraiappakam  
Chennai 600 097  
Tel.: +91-44 2496 6800

**Indonesia**

PT GRUNDFOS Pompa  
Graha intrub Lt. 2 & 3  
Jln. Cililitan Besar No.454. Makasar,  
Jakarta Timur  
ID-Jakarta 13650  
Tel.: +62 21-469-51900  
Fax: +62 21-460 6910 / 460 6901

**Ireland**

GRUNDFOS (Ireland) Ltd.  
Unit A, Merrywell Business Park  
Ballymount Road Lower  
Dublin 12  
Tel.: +353-1-4089 800  
Fax: +353-1-4089 830

**Italy**

GRUNDFOS Pompe Italia S.r.l.  
Via Gran Sasso 4  
I-20060 Truccazzano (Milano)  
Tel.: +39-02-95838112  
Fax: +39-02-95309290 / 95838461

**Japan**

GRUNDFOS Pumps K.K.  
1-2-3, Shin-Miyakoda, Kita-ku  
Hamamatsu  
431-2103 Japan  
Tel.: +81 53 428 4760  
Fax: +81 53 428 5005

**Kazakhstan**

Grundfos Kazakhstan LLP  
7' Kyz-Zhibek Str., Kok-Tobe micr.  
KZ-050020 Almaty Kazakhstan  
Tel.: +7 (727) 227-98-55/56

**Korea**

GRUNDFOS Pumps Korea Ltd.  
6th Floor, Aju Building 679-5  
Yeoksam-dong, Kangnam-ku, 135-916  
Seoul, Korea  
Tel.: +82-2-5317 600  
Fax: +82-2-5633 725

**Latvia**

SIA GRUNDFOS Pumps Latvia  
Deglava biznesa centrs  
Augusta Deglava ielā 60  
LV-1035, Rīga,  
Tel.: + 371 714 9640, 7 149 641  
Fax: + 371 914 9646

**Lithuania**

GRUNDFOS Pumps UAB  
Smolensko g. 6  
LT-03201 Vilnius  
Tel.: +370 52 395 430  
Fax: +370 52 395 431

**Malaysia**

GRUNDFOS Pumps Sdn. Bhd.  
7 Jalan Peguam U1/25  
Glenmarie Industrial Park  
40150 Shah Alam, Selangor  
Tel.: +60-3-5569 2922  
Fax: +60-3-5569 2866

**Mexico**

Bombas GRUNDFOS de México  
S.A. de C.V.  
Boulevard TLC No. 15  
Parque industrial Stiva Aeropuerto  
Apodaca, N.L. 66600  
Tel.: +52-81-8144 4000  
Fax: +52-81-8144 4010

**Netherlands**

GRUNDFOS Netherlands  
Veluwezoom 35  
1326 AE Almere  
Postbus 22015  
1302 CA ALMERE  
Tel.: +31-88-478 6336  
Fax: +31-88-478 6332  
E-mail: info\_gnl@grundfos.com

**New Zealand**

GRUNDFOS Pumps NZ Ltd.  
17 Beatrice Tinsley Crescent  
North Harbour Industrial Estate  
Albany, Auckland  
Tel.: +64-9-415 3240  
Fax: +64-9-415 3250

**Norway**

GRUNDFOS Pumper A/S  
Strømsveien 344  
Postboks 235, Leirdal  
N-1011 Oslo  
Tel.: +47-22 90 47 00  
Fax: +47-22 32 21 50

**Poland**

GRUNDFOS Pompy Sp. z o.o.  
ul. Klonowa 23  
Baranowo k. Poznania  
PL-62-081 Przeźmierowo  
Tel.: (+48-61) 650 13 00  
Fax: (+48-61) 650 13 50

**Portugal**

Bombas GRUNDFOS Portugal, S.A.  
Rua Calvet de Magalhães, 241  
Apartado 1079  
P-2770-153 Paço de Arcos  
Tel.: +351-21-440 76 00  
Fax: +351-21-440 76 90

**Romania**

GRUNDFOS Pompe România SRL  
S-PARK BUSINESS CENTER, Clădirea  
A2, etaj 2  
Str. Tipografilor, Nr. 11-15, Sector 1, Cod  
013714  
Bucuresti, Romania  
Tel.: 004 021 2004 100  
E-mail: romania@grundfos.ro

**Serbia**

Grundfos Srbija d.o.o.  
Ormladinskih brigada 90b  
11070 Novi Beograd  
Tel.: +381 11 2258 740  
Fax: +381 11 2281 769  
www.rs.grundfos.com

**Singapore**

GRUNDFOS (Singapore) Pte. Ltd.  
25 Jalan Tukang  
Singapore 619264  
Tel.: +65-6681 9688  
Fax: +65-6681 9689

**Slovakia**

GRUNDFOS s.r.o.  
Prievozská 4D 821 09 BRATISLAVA  
Tel.: +421 2 5020 1426  
sk.grundfos.com

**Slovenia**

GRUNDFOS LJUBLJANA, d.o.o.  
Leskoškova 9e, 1122 Ljubljana  
Tel.: +386 (0) 1 568 06 10  
Fax: +386 (0) 1 568 06 19  
E-mail: tehnika-si@grundfos.com

**South Africa**

GRUNDFOS (PTY) LTD  
16 Lascelles Drive, Meadowbrook Estate  
1609 Germiston, Johannesburg  
Tel.: (+27) 10 248 6000  
Fax: (+27) 10 248 6002  
E-mail: lgradidge@grundfos.com

**Spain**

Bombas GRUNDFOS España S.A.  
Camino de la Fuentevilla, s/n  
E-28110 Algete (Madrid)  
Tel.: +34-91-848 8800  
Fax: +34-91-628 0465

**Sweden**

GRUNDFOS AB  
Box 333 (Lunnagårdsgatan 6)  
431 24 Mölndal  
Tel.: +46 31 332 23 000  
Fax: +46 31 331 94 60

**Switzerland**

GRUNDFOS Pumpen AG  
Bruggacherstrasse 10  
CH-8117 Fällanden/ZH  
Tel.: +41-44-806 8111  
Fax: +41-44-806 8115

**Taiwan**

GRUNDFOS Pumps (Taiwan) Ltd.  
7 Floor, 219 Min-Chuan Road  
Taichung, Taiwan, R.O.C.  
Tel.: +886-4-2305 0868  
Fax: +886-4-2305 0878

**Thailand**

GRUNDFOS (Thailand) Ltd.  
92 Chaloe Phrakiat Rama 9 Road  
Dokmai, Pravej, Bangkok 10250  
Tel.: +66-2-725 8999  
Fax: +66-2-725 8998

**Turkey**

GRUNDFOS POMPA San. ve Tic. Ltd.  
Sti.  
Gebze Organize Sanayi Bölgesi  
İhsan dede Caddesi  
2. yol 200, Sokak No. 204  
41490 Gebze/ Kocaeli  
Tel.: +90 - 262-679 7979  
Fax: +90 - 262-679 7905  
E-mail: satis@grundfos.com

**Ukraine**

ТОВ "ГРУНДФОС УКРАЇНА"  
Бізнес Центр Європа  
Столичне шосе, 103  
м. Київ, 03131, Україна  
Tel.: (+38 044) 237 04 00  
Fax: (+38 044) 237 04 01  
E-mail: ukraine@grundfos.com

**United Arab Emirates**

GRUNDFOS Gulf Distribution  
P.O. Box 16768  
Jebel Ali Free Zone, Dubai  
Tel.: +971 4 8815 166  
Fax: +971 4 8815 136

**United Kingdom**

GRUNDFOS Pumps Ltd.  
Grovebury Road  
Leighton Buzzard/Beds. LU7 4TL  
Tel.: +44-1525-850000  
Fax: +44-1525-850011

**U.S.A.**

Global Headquarters for WU  
856 Koomey Road  
Brookshire, Texas 77423 USA  
Phone: +1-630-236-5500

**Uzbekistan**

Grundfos Tashkent, Uzbekistan  
The Representative Office of Grundfos  
Kazakhstan in Uzbekistan  
38a, Oybek street, Tashkent  
Tel.: (+998) 71 150 3290 / 71 150 3291  
Fax: (+998) 71 150 3292

<b>99480674 01.2025</b>
-------------------------

ECM: 1413251
--------------

[www.grundfos.com](http://www.grundfos.com)

**GRUNDFOS** 

Trademarks displayed in this material, including but not limited to Grundfos and the Grundfos logo, are registered trademarks owned by The Grundfos Group. © 2025 Grundfos Holding A/S, all rights reserved.