# **Grundfos Solar Connect** - Tank Module

**Quick Installation Guide** 

#### IN THE BOX

- Grundfos Solar Connect Tank Level Sensor (Standalone Device)
- Mounting Bracket/Cradle integrated on back of device
- X2 AA Batteries, pre-installed
- Hydrostatic sensor, includes 5m cable
- QR Code KEEP For Set-Up



### **COMMISSIONING (10/MINS)**

#### Existing User: Start at Step 7.

Mobile Service or Wifi is required – For App Download & Commissioning It may take up to 24hrs to receive data, from start up.

- 1. From APP Store: Download Grundfos Solar Connect (IOS & Android)
- New User: Tap "Sign Up" to create new user account Upon Sign-Up, a 6-digit code will be sent to your email, Enter Code in APP then Tap: "Confirm".
- 3. New User: Tap: "Update Subscription" Enter a Credit Card (Master/Visa), then Tap: "Subscribe"
- 4. New User: Tap "SETUP A DEVICE", then Tap "Next" & choose device-type, Tap: "Pump or Tank Module"
- 5. New User: Confirm Subscription for selected device then Tap: "Update Subscription"
- 6. New User: Go to Step 8
- **Existing User:** Log in and **Tap:**" Add New" (Top Right in home screen)
  **Tap:** Next & Enter the device your adding: **Tap:** "Tank Module" or "Pump Module"
  **Tap:** Update Subscription
- 8. Tap: "Scan QR Code" (Sticker is inside of device battery compartment) or manually enter the code.
- 9. Tap: "SAVE"- located top Right of screen. Device is now paired & ready to transmit data
- 10. Enter Site Information: Site Name, link a Pump Module or Add to Group- (Multi site)
  Enter Tank Dimensions: Diameter & Height (Measure base of tank to bottom of Overflow pipe or Float Level)
- 11. Tap: "Done" Then Tap "Start or Skip": Tutorial. (3-step tutorial)
- 12. Tap: "I'm Ready" This will take you to home screen to select the site you just created
- 13. Locate & Tap on site: To view data
- 14. Set "Alert Thresholds": Volume & Level (Min- Low Level Alert & Max- Over flow Alert)



For more information, visit www.grundfos.com/au/campaign/solar-connect

Possibility in every drop

## **INSTALLATION (15/MINS)**

**Orientation:** ONLY Mount the device vertically with a clear view to sky (fig.1) **Antenna Area is:** Top 1/3rd of module - Keep Above Metal Objects (fig.1) **Nearby obstacles:** Could obstruct transmission (Metal, Tree's & Buildings)

- 1. Remove mounting plate/Cradle from device. (fig.2 Retaining Screw bottom)
- 2. Remove front cover (fig.2) then remove Pull Tab (fig.3) between battery and terminal. Device is now activated & ready to transmit data
- 3. Replace cover & slide on to bracket & re-insert retaining screw (fig.2)
- 4. Lower the prewired sensor to the bottom of tank (fig.4)

