

WATER REUSE WHITE PAPER

GRUNDFOS SOLUTIONS FOR INDUSTRIAL WATER REUSE

BY APPLICATION MANAGER MARCO WITTE AND APPLICATION SPECIALIST PABLO ANDRES TOJO, GRUNDFOS WATER TREATMENT

Table of Contents

Introduction to water reuse	2
Background	2
Reuse Process	3
Wastewater transport	
Biological treatment	
Waste water release	
Chemical and physical treatment	3
Concentrate treatment	


Control systems	4
Grundfos solutions in water reuse	
Challenges	.!
Complexity reduction and savings	(
Chemical dosing in pre-treatment & backwashing	
A glimpse into the future	
Conclusion	5



Introduction:


Water is such a fundamental necessity for life that it is often taken for granted. In modern industrial societies, the water from every tap is expected to be so pure that we can drink it without a second thought. However, the reality is much more complicated. Mankind is becoming increasingly aware that fresh water is a rarity, and the process of water treatment is vitally importance to us all. Water consumption in the industrial market contributes greatly to global water consumption, and therefore, Grundfos is putting special focus there.

Purpose:

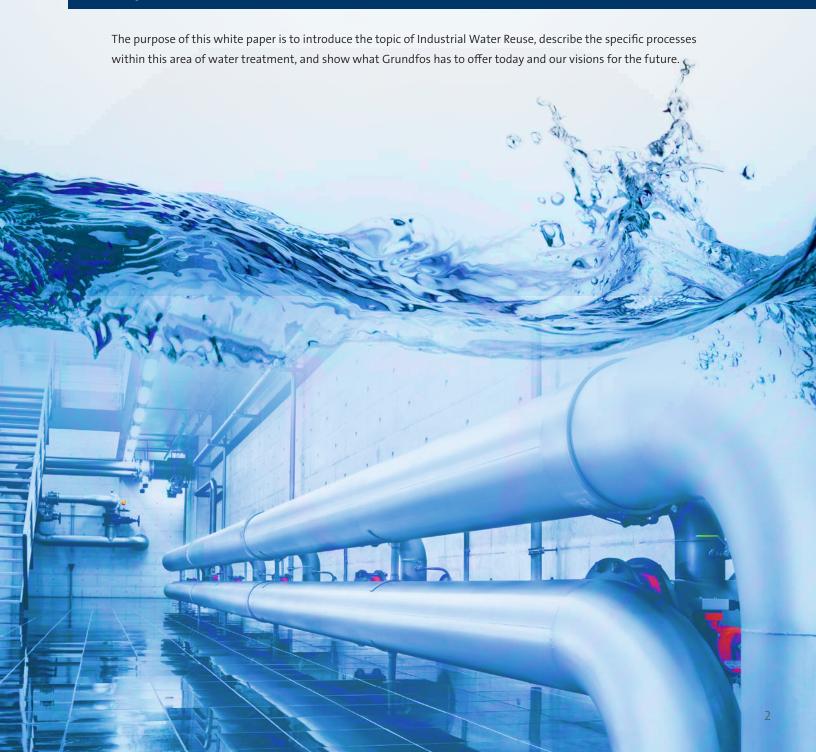

Background to Water Reuse

In industrial markets, water plays an important role in solvents, cooling liquids, wash and clean liquids, and more. Whenever we use water, we change the content, thus changing the water quality. The process water then needs to be treated to avoid contaminating the water cycle with industrial substances. A general cycle of water usage and treatment is shown below:

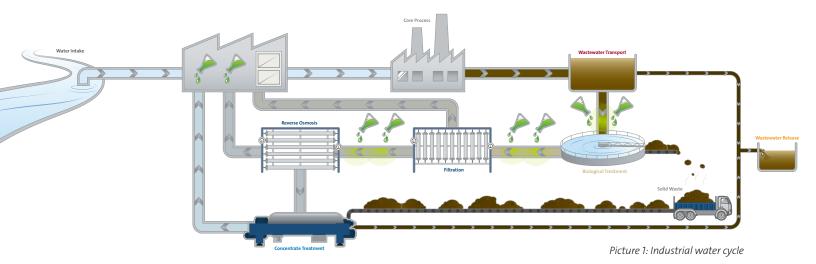

Water Reuse Process

The process generally consists of the following stages:

Water Treatment Wastewater Transport Chemical Pre-Treat Chemical & Physical Treatment Concentrate Treatment Water Quality Measurement & Controls

Picture 2: Generic water reuse process

Wastewater Transport

After the different uses in the industrial utilities or process, the water is transported toward the treatment facility. Depending on the water chemistry and the particle content, different transport pumps are available through Grundfos. Depending on the water condition, different materials of construction must be chosen. For example, stainless steel is used when high chloride content is present.

Biological Treatment

In industrial and municipal treatment plants, biological treatment with bacteria plays an important role when it comes to treating wastewater. In this step, the nitrogen content: Biological Oxygen Demand (BOD) and Chemical Oxygen Demand (COD), are treated to lower the concentration of N and P values. Sometimes this step is combined with a physical step to separate particles out of the water. Membrane Bioreactors are often used if some of the water isn't reused but released into the environment.

Wastewater Release

As described above, after this step, parts of the wastewater can be released based on compliance to local regulations. It is often released into a river or another surface water source. In some areas, a disinfection step is included in this part of the process, based on local laws and regulations.

Chemical and Physical Treatment

If more extensive treatment is needed, the next step can either be chemical or physical treatment. In this step, the water is conditioned in terms of pH and all particles are removed to prepare the water for the last step of the concentrate treatment.

Concentrate Treatment

Concentrate treatment can be a challenging water treatment process. High energy demand and high ion concentrations are the two main challenges, along with a relatively small amount of water. This step is often done via crystallization or Reverse Osmosis (RO). Challenges for RO applications include high pressure and the water chemistry requirements, which can be a challenge for the membranes and other system components, such as pipes, valves, and pumps.


Control Systems

Throughout the entire process, different measuring and control functions help provide reliable results. Typically, hydraulic parameters such as temperature, flow and pressure, or chemical parameters such as pH, turbidity, conductivity and Total Organic Carbon (TOC) are measured. BOD & COD, Phosphate and the Nitrogen parameters are most important ones when it comes to wastewater regulations.

The overall process control is important for every treatment application. Normally, a PLC analyzes all measured signals from different process steps and controls the process to ensure successful, accurate treatment. Standard data communication such as Profibus or Ethernet, is normally used to transfer this data. Newer technology now includes advanced process control systems, such as cloud solutions and automated remote management.

A direct link from the process step to the required pump solution is shown in the picture below (Picture 3):

GRUNDFOS PRODUCTS IN INDUSTRIAL WATER REUSE

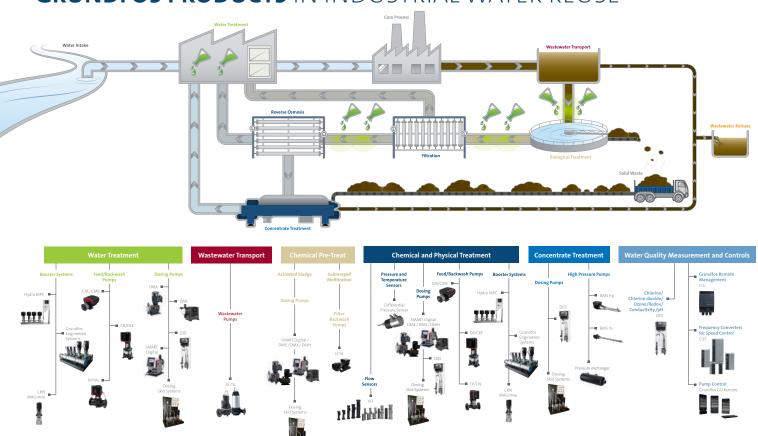

Picture 3: Link from process to pump and pump system

Grundfos Solutions in Water Reuse

As described above, chemical and physical treatment is important to a water reuse process. Very often it is the particle removal step that is the heart of the process, as a proper pre-filtration is key to a sustainable and reliable operation of the following process steps.

Grundfos offers a complete portfolio of state-of-the-art pumps and pump systems to not only make your Ultrafiltration system reliable and efficient but also ready for the future, including increasing demands in your water reuse process.

The following chapter better describes the entire Grundfos product and solution portfolio.

Challenges

Major challenges in an ultrafiltration application can be:

- Changing raw water conditions (e.g. turbidity increase)
- · Changing demand on the clean water side

These challenges must be handled and solved with modern technology. Such a process will require a system in which components can be easily integrated for easy automation and proactive communication to quickly provide reliable information on water quality. At the same time, the process must be energy efficient and economical, with minimal environmental impact.

The pump system must be able to account for variability in influent water supply to the UF system. A good deal of variability can take place despite these being "fixed-flow units." Changes in seasonal conditions, process fluctuations or even water supply restrictions can cause system variations. The right variable frequency drive (VFD) on a pump can help to control flow without wasting energy, such as with a throttling valve. Additionally, a drive can enable simple constant-pressure control for the membrane system regardless of changes in water supply or discharge pressure variability.

The basic affinity laws for pumps and motors shows that by reducing motor speed, you decrease energy consumption to the third power. End-users often use a throttling valve to decrease flow on a fixed speed pump. This practice wastes large amounts of energy and money – a problem that is worsened when pumps are oversized during the design phase.

Furthermore, throttling a valve will move a pump down the efficiency curve, so not only is the pump's power draw higher, it is less efficient. A drive allows you to dial in the exact flow and pressure requirement and save large amounts of energy at better efficiencies.

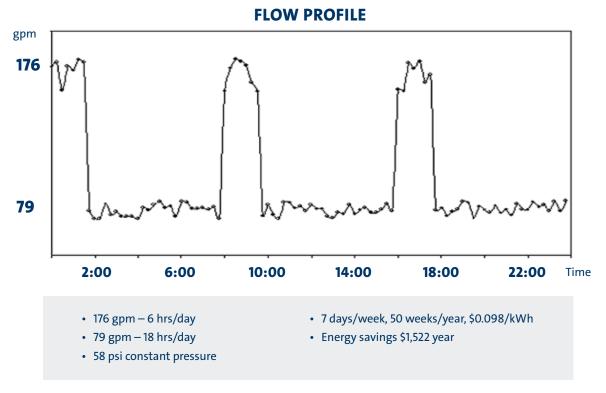


Figure 1: Flow profile of a pump in an ultrafiltration system

EXAMPLE

- A 10 hp fixed-speed CR pump that is engineered to deliver 175 gpm of flow in a system with 60 psi is sometimes controlled by a throttling valve.
- This increases pressure (to nearly 100psi) and moves performance down both the flow curve and the efficiency curve. A CR pump in this application will require 7.5 hp.
- By using a variable frequency drive to meet the flow requirements, the exact pressure and flow needs are met.
- The power required drops to 5 hp, offering an energy savings of \$1,550 per year.

Complexity Reduction and Savings

A VFD driven pump can dramatically reduce the number of different pump designs used to manage different RO/UF system sizes. This standardization on fewer pump sizes, each with more flow flexibility, will help system manufacturers reduce complexity and costs while easing design needs. It can also benefit an end-user with multiple systems or membrane trains by offering additional savings in maintenance and spare-parts costs.

Some system manufacturers will ship membrane systems to other countries with different power requirements. A VFD can allow for 50 or 60 Hz power and still run the standard pump motor. This can save in the complexity and cost of different power variants for membrane systems for North American or export use. Moreover, a smart booster pump also softens the start-up and shut-down of flow. This eliminates powerful water forces that can, under some circumstances, increase wear of membranes in a system.

All membranes will eventually foul and require cleaning; however, as membranes clog, the pressure requirements to treat water at the same flow rate increases. Without a VFD, a system with a fixed-speed pump will begin to deliver less than the rated permeate flow. A modern drive and pump can account for pressure changes easily, allowing them to operate longer between cleanings without a loss in production flow, provided that the filtered water continues to meet quality requirements.

Choosing the right drive and pump selection can help the end-user to plan for future system enhancements. This could include changes to the membrane trains; newer, lower-pressure membranes; or process flow changes. This flexibility will make retrofits cheaper in the future, enabling the end-user to take advantage of new, sustainable solutions.


Newer pump products often include integrated drives, where a drive is optimized for, mounted on, and works together with the pump motor. This can lead to pumps with smaller motors, optimized for system performance, to ensure that the pump is protected. End-users should also look for a pump-designed drive: many drives on the market are generic to a variety of motor needs. A drive designed and matched for a specific model of pump can make installation and set-up easier and increase efficiency. [1]


Chemical Dosing in Pre-Treatment and Backwashing

Ultrafiltration requires extremely accurate dosing rates of chemical additives. Modern digital dosing pumps, such as those incorporated in systems provided by Grundfos can deliver the needed amount of chemicals with high precision. [Source: "How good is the Grundfos SMART Digital DDA FCM really?" University of Applied Sciences Weihenstephan-Triesdorf - Institute of food technology]

Looking at the diagram below, one can see the nearly continuous dosing flow, which is provided by the motor technology of the stepper motor, even with small volumes.

STEPPER MOTOR CONTROL FLOW PROFILE

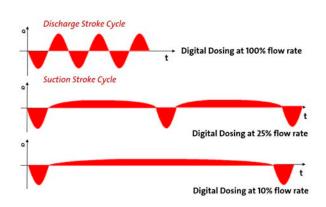

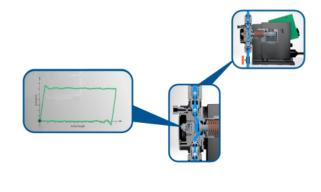

Picture 4: Flow monitor principle and dosing flow diagram

An integrated pressure sensor and flow monitoring algorithm controls the flow, which gives feedback about the actual flow in comparison to the set point. In addition, the SMART Digital range provides modular pumps for easy system integration. The clear menu structure and the plain text menu provide the needed information about the status of the pump and eases the daily work burden on the system operators.

System integration is easy with a SMART Digital pump and E-box plug and pump system where bus communication allows remote access to the dosing system.

A Glimpse Into the Future

Digitalization, connected systems, Big Data and autonomous production are themes that are present in all boardrooms around the globe. In the water treatment industry, the fourth industrial revolution will impact the way we are treating water and how we handle and use data in the future. This chapter will showcase possibilities with connected systems and innovative uses of data, with algorithms to present data from RO systems and to optimize the anti-scalant usage in RO systems.

As a new, innovative solution, Smart RO works by analyzing data from standard sensors (pressure, temperature, and conductivity) present in an RO system. The sensors monitor the operation and will react to changes in membrane performance. Data from the sensors can be transmitted to and stored in either the dosing pump or a cloud server – potentially both locations can be used for data storage (local or historical). Smart RO has two main characteristics: 1. Real-time data processing and visualization 2. Digital intelligence enhancing decision making for dosing. An upgraded version of a SMART Digital dosing pump is used for the implementation of Smart RO. [3]

First results (Figure 2) in field and pilot tests are showing strong results, and the tests with real systems at customer locations are running today.

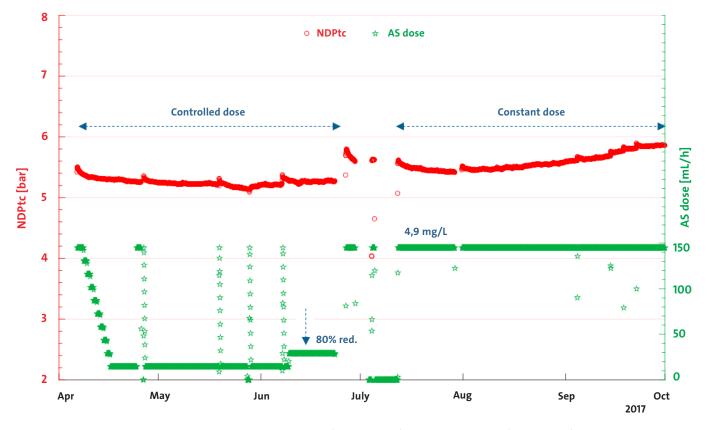


Figure 2: Comparison between system running with Smart RO (controlled dose) and without Smart RO (constant dose)

Conclusion

This white paper is intended to introduce the reader to the many elements that constitute the water reuse process. We hope that it has answered some of your questions, but of course, there is more to learn. The use of water varies from one industry to another, as there are several different applications within water treatment and industrial water reuse in which Grundfos has developed optimized solutions to make use of intelligent and solutions.

As water scarcity increases, so will the need to recycle water. Industrial water treatment processes will play a significant role in ensuring a safe, sustainable future for the entire planet.

Sources:

- [1] Harland Pond: Using pump Variable Speed Drive Solutions in Membrane Filtration
- [2] "How good is the Grundfos SMART Digital DDA FCM really? Comparative study of dosing precision and accuracy between SMART Digital DDA and the mechanical dosing pump DMI" University of Applied Sciences Weihenstephan-Triesdorf Institute of food technology
- [3] Optimization of RO Systems through Digitalization, Connectivity and SMART Algorithms; Marco Witte, Dr. Carsten Persner, Victor Augusto Yangali-Quintanilla, MSc, PhD,

Visit grundfos.ca/pei to learn more about Natural Resources Canada (NRCan) pump energy index (PEI) requirements and PEI ratings on specific Grundfos models.

